

Mounting accessories

Stainless Steel Mounting Brackets and Adapters



Reference manual



Notice to device designation

The table below lists the mounting accessories together with their marking on the type plate and in the Operating Instructions.

Designation STAHL	Device designation original
WB-EC-932-SSBK-M	SSBK-M
WB-EC-942-SSBK-L	SSBK-L
PMA-EC-932-SSPM-M	SSPM-M
PMA-EC-932-SSPTM-M	SSPTM-M



DESCRIPTION

The stainless steel mounting brackets and adapters are designed to permit the perfect installation of Tecnovideo camera housings and Pan & Tilt units.

MODELS

WB-EC-932-SSBK-M	Wall mounting bracket for EC-932 series and for PMA-EC-932-SSPM-M adapter
WB-EC-942-SSBK-L	Wall mounting bracket for EC-942 and EC-952 series
PMA-EC-932-SSPM-M	Pole mount adapter for WB-EC-932-SSBK-M und WB-EC-932-SSBK-L brackets
PMA-EC-932-SSPTM-M	Pole Top mount adapter for EC-932 series

CERTIFICATIONS

2011/65/EU (RoHS) 2012/19/EU (WEEE)

PRELIMINARY REMARKS

Prior to installation and operation, read carefully all instructions in this manual and heed all warnings.

Unpack this equipment and handle it carefully. If the package appears to be damaged, notify the shipper immediately.

Use the original packaging to transport the unit. In case of returning the equipment, the original packaging must be used.

Make sure that the installation surface can support at least four times the weight of the unit in normal operating conditions. In case of excessive external stress (e.g. vibration, strong winds or impact), the equipment may need additional means of protection.

Proper stainless steel hardware should be carefully chosen to fasten the unit to the surfaces.

Use caution when lifting and assembling the unit. It is recommended that non-slip protective gloves be worn during installation. The unit could bear sharp edges.

This equipment has been designed to fit in harsh environments requiring little or no maintenance. Suggested inspection interval is 6 months, but extremely harsh environments may require more frequent inspection and maintenance checks.

Check mounting hardware for integrity and tightness. Replace or tighten any damaged/loose part.



Preserve this manual as a reference for future needs.



Used electrical, electronic and stainless steel products should not be mixed with general waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/95/EC and 2002/96/EC.

By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products, please contact your local municipality or your waste disposal service. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

The manufacturer declines all liability for any consequence resulting from improper installation practices, tampering or improper uses of the product.

The descriptions and illustrations contained in this manual are not binding. The manufacturer reserves the right to make any alterations deemed appropriate for the technical, manufacturing and commercial improvement of the product, while leaving the essential product features unchanged, at any time and without undertaking to update the present publication.

R. STAHL HMI Systems GmbH

Adolf-Grimme-Allee 8, 50829 Cologne, Germany Sales Support Tel. +49 221 768 06 – 1200 Technical Support Tel. +49 221 768 06 – 5000 e-mail: sales.dehm@r-stahl.com, support.dehm@r-stahl.com