



Assembly Instruction

product: WB-EC-962-WMB-TNXCD-VA4.x

author: S. Weber

date: Apr. 09, 2025

doc ID: 250409-PT95MA-SW-WB-EC-962-WMB-TNXCD-VA4.x_assembly
instruction_rev.01.idw

passing:



INTRO



What you need:	
Wrench	19mm
Wrench	17mm
Allen wrench	3mm
Torque, Allen -wrench	17 - 19mm 3mm

ATTENTION:
Please be careful when
working at heights !



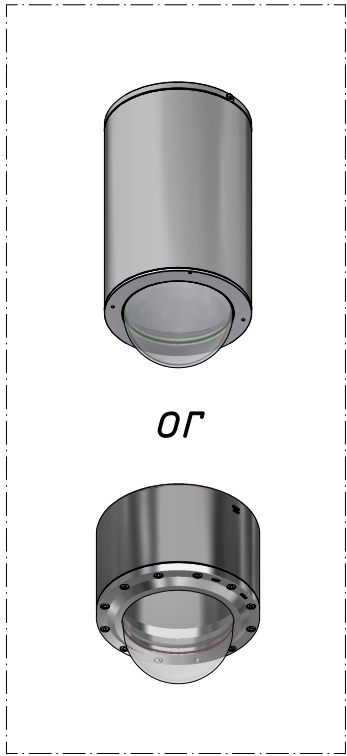


Table of content			
obj.	qty.	part	material
1	1	WMB TNXCD-VA4.x	stainless steel
2	1	WPR WMB TNXCD-VA4.x	stainless steel
3	4	Threaded bolt ISO 7380-1 - M5 x 8	stainless steel
4	5	Threaded bolt DIN 6921 - M8 x 12	stainless steel
5	2	cable tie	poly


1

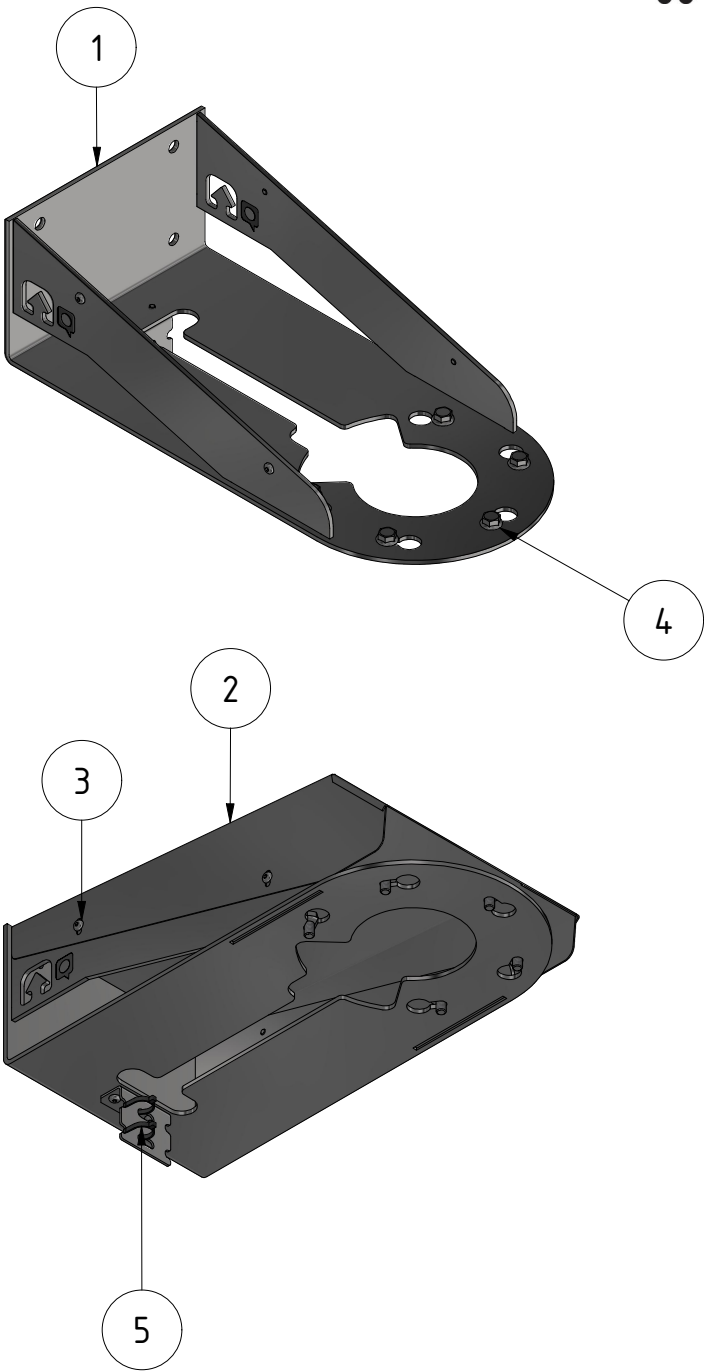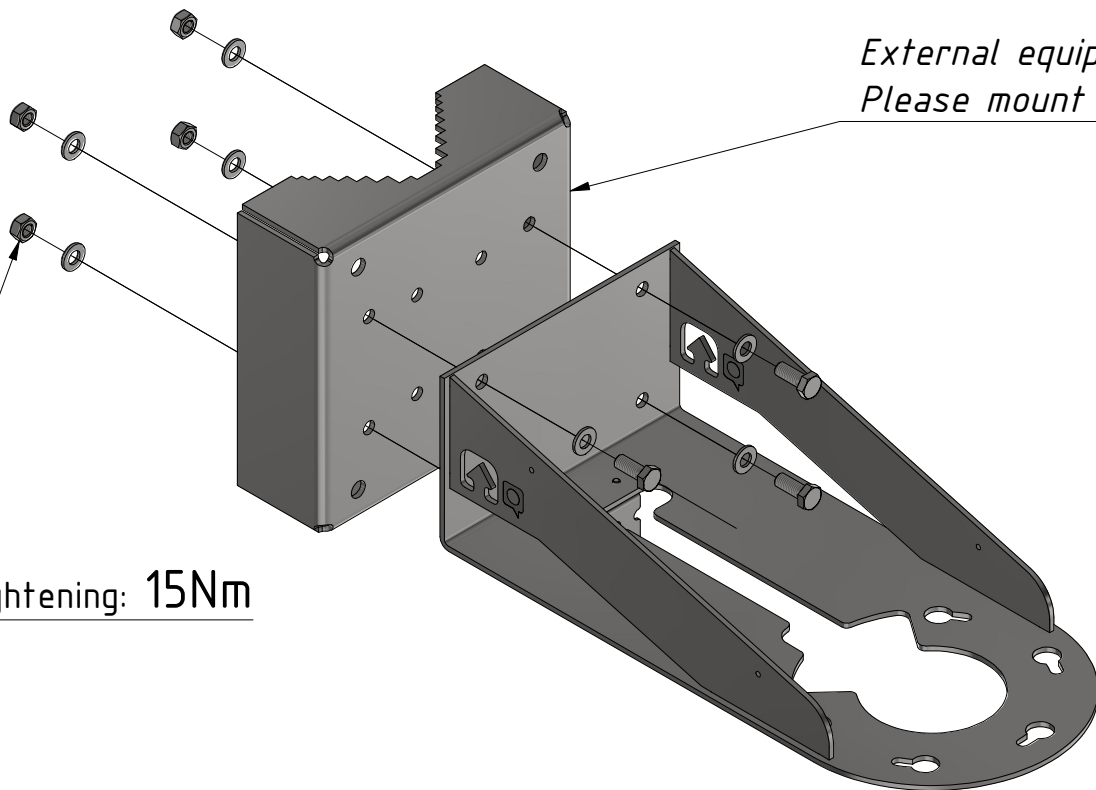

*External equipment
Please mount first!*


tightening: 15Nm

2

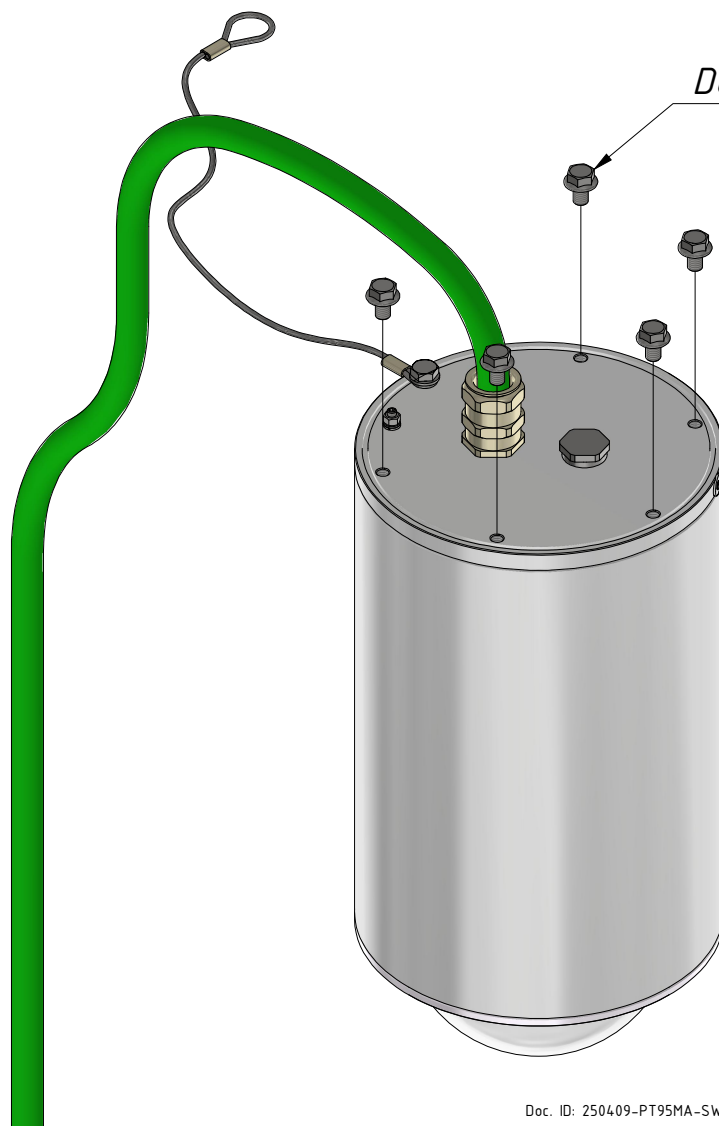


Do not screw in completely !


3

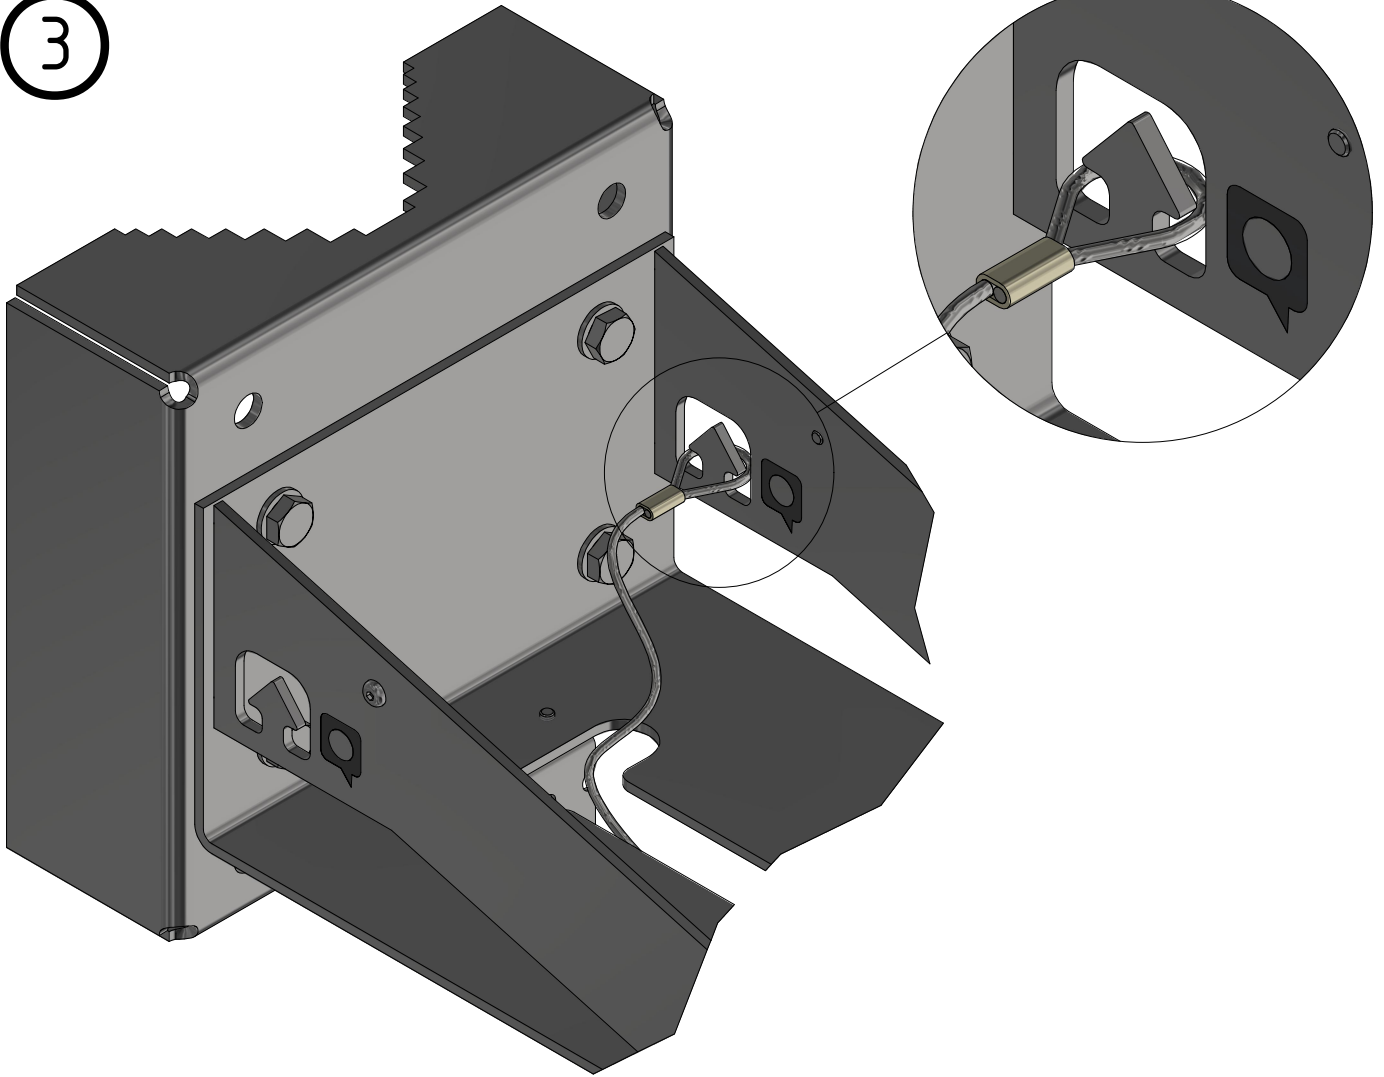

4

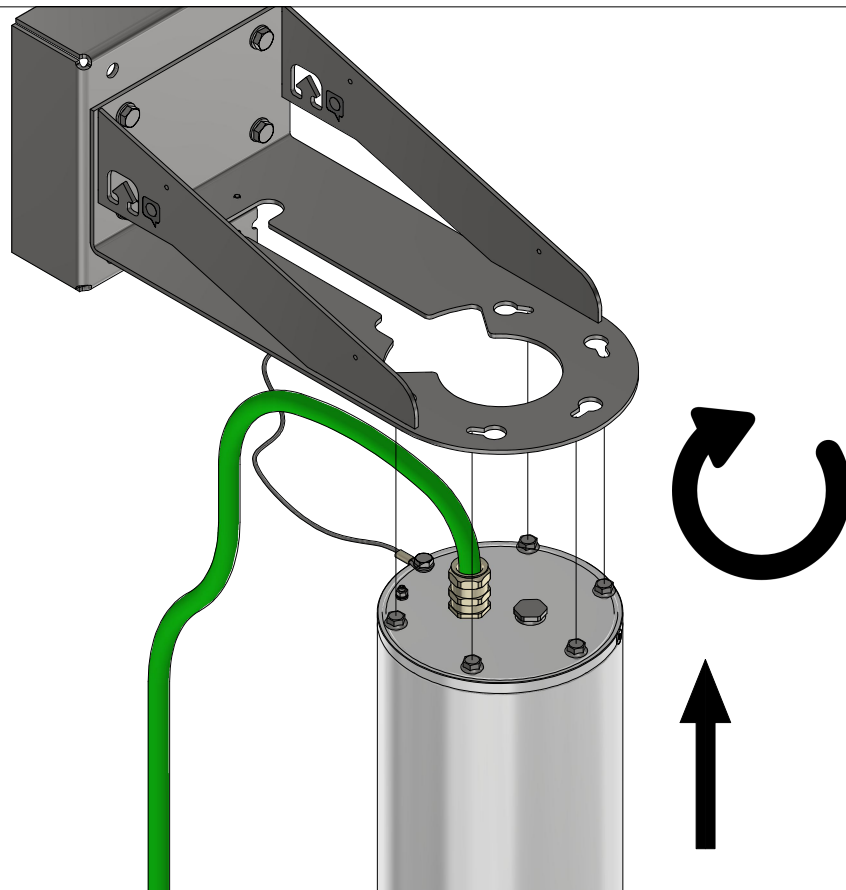


5

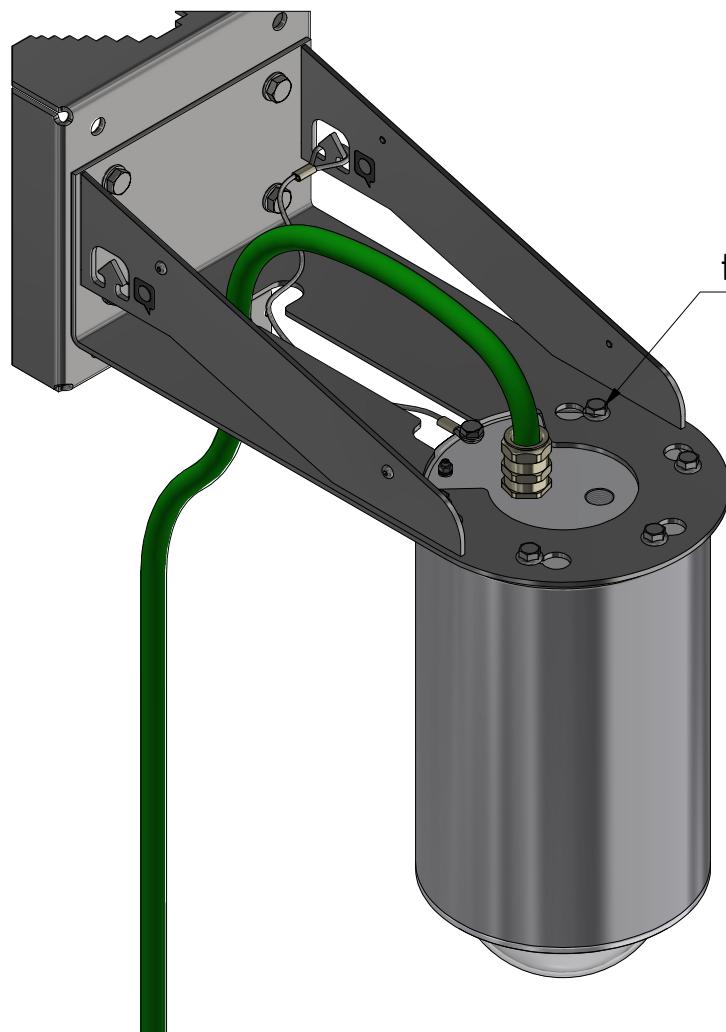


tightening: 10Nm


6

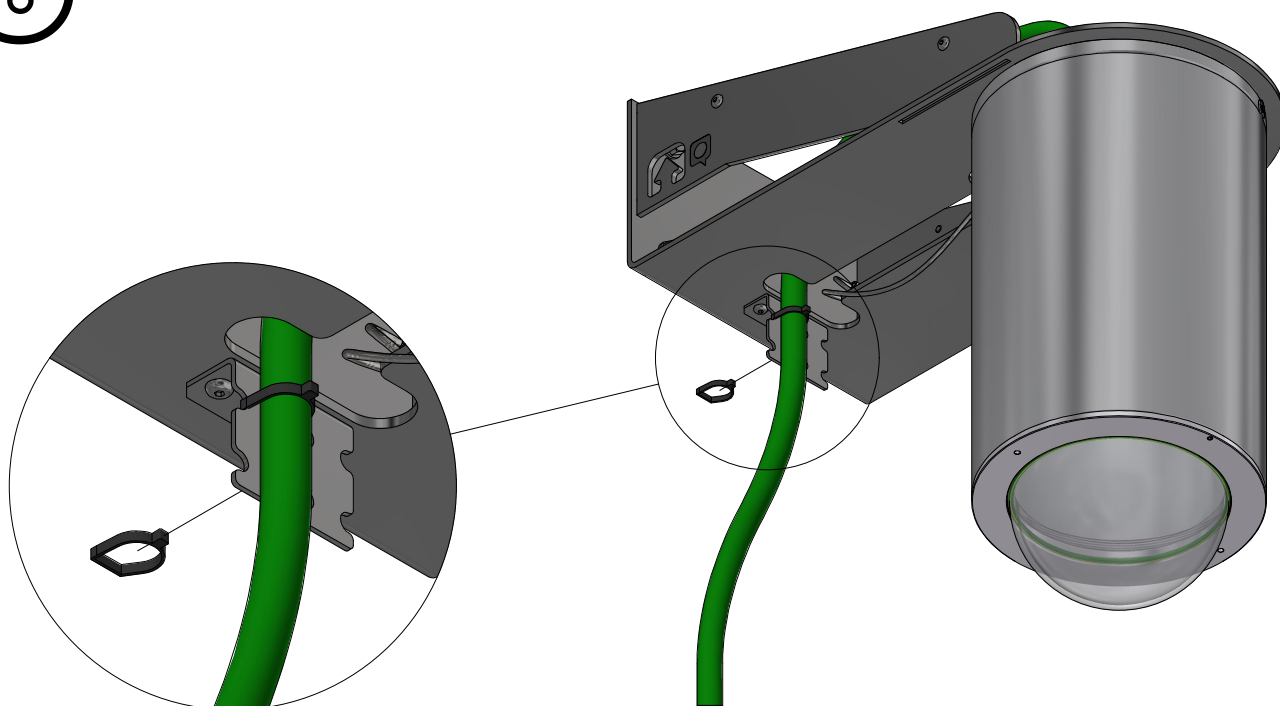


7

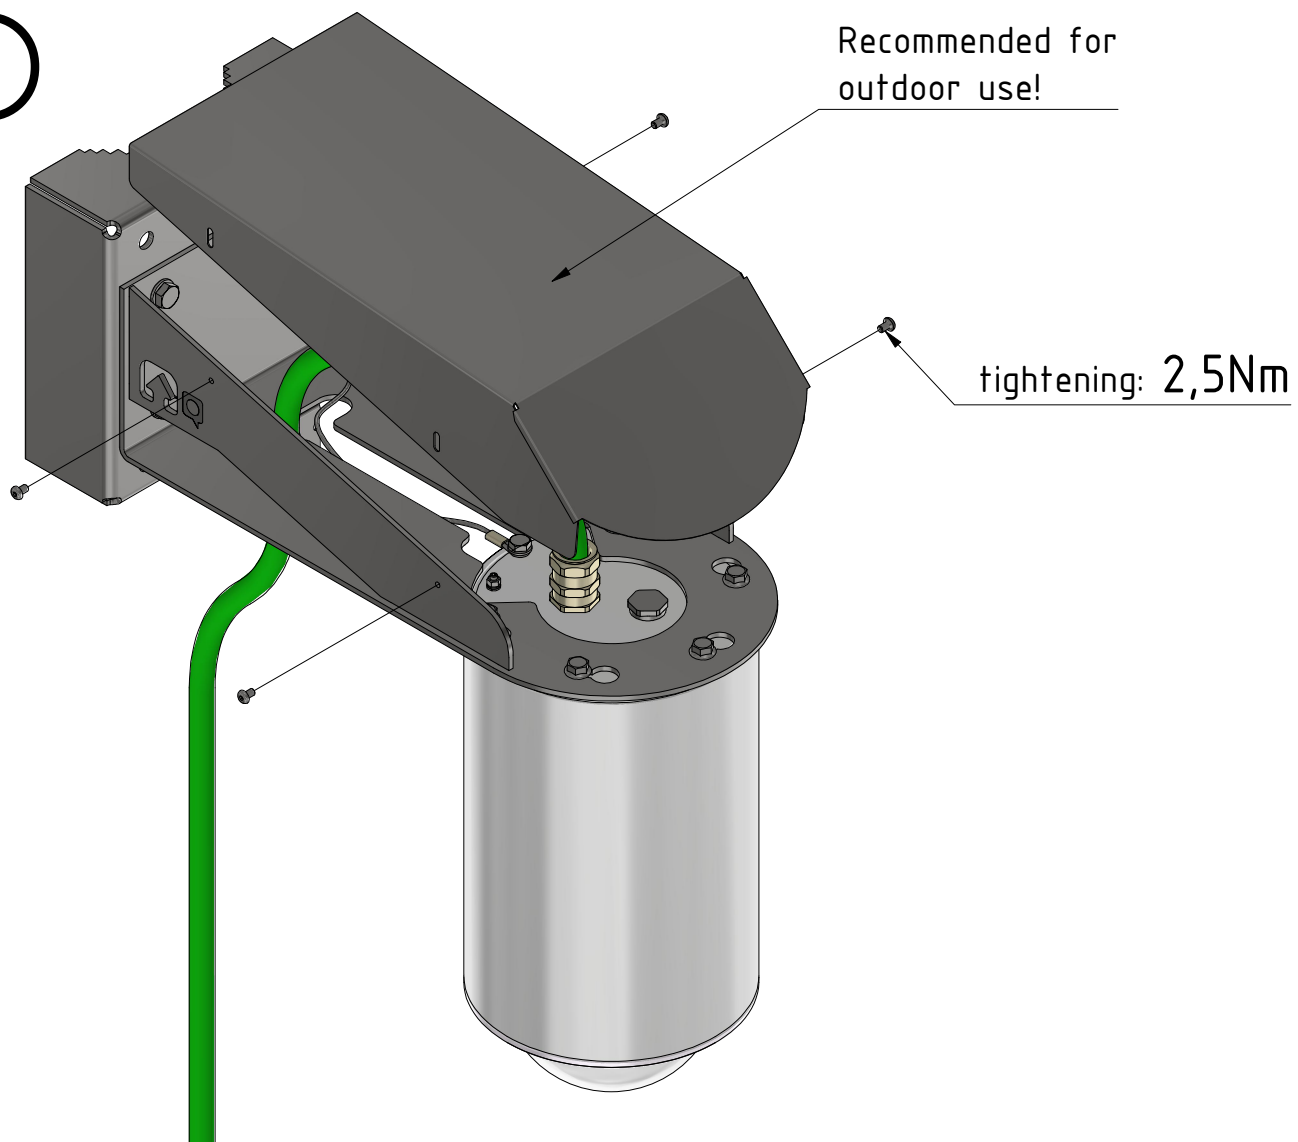

8

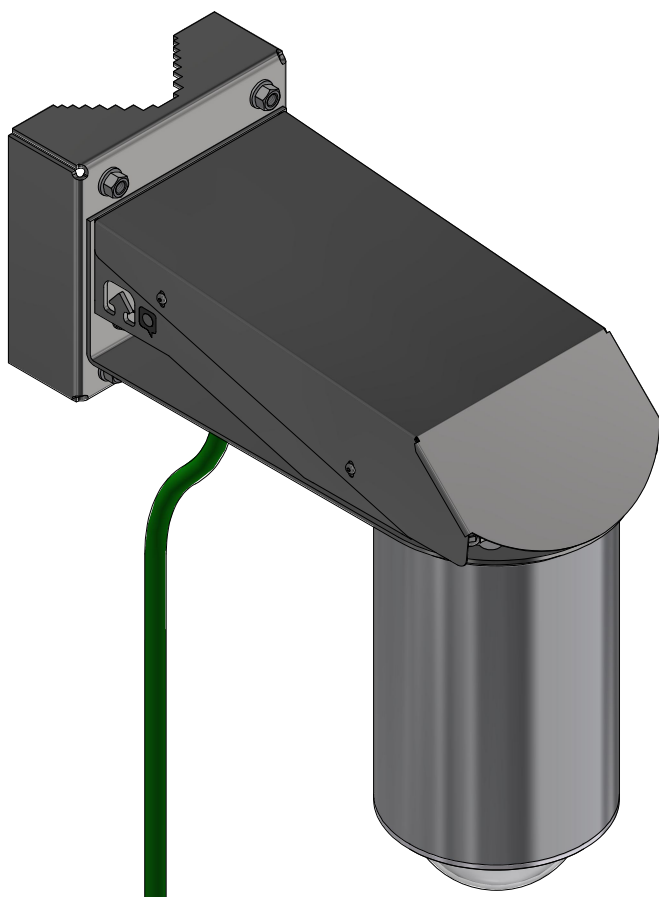

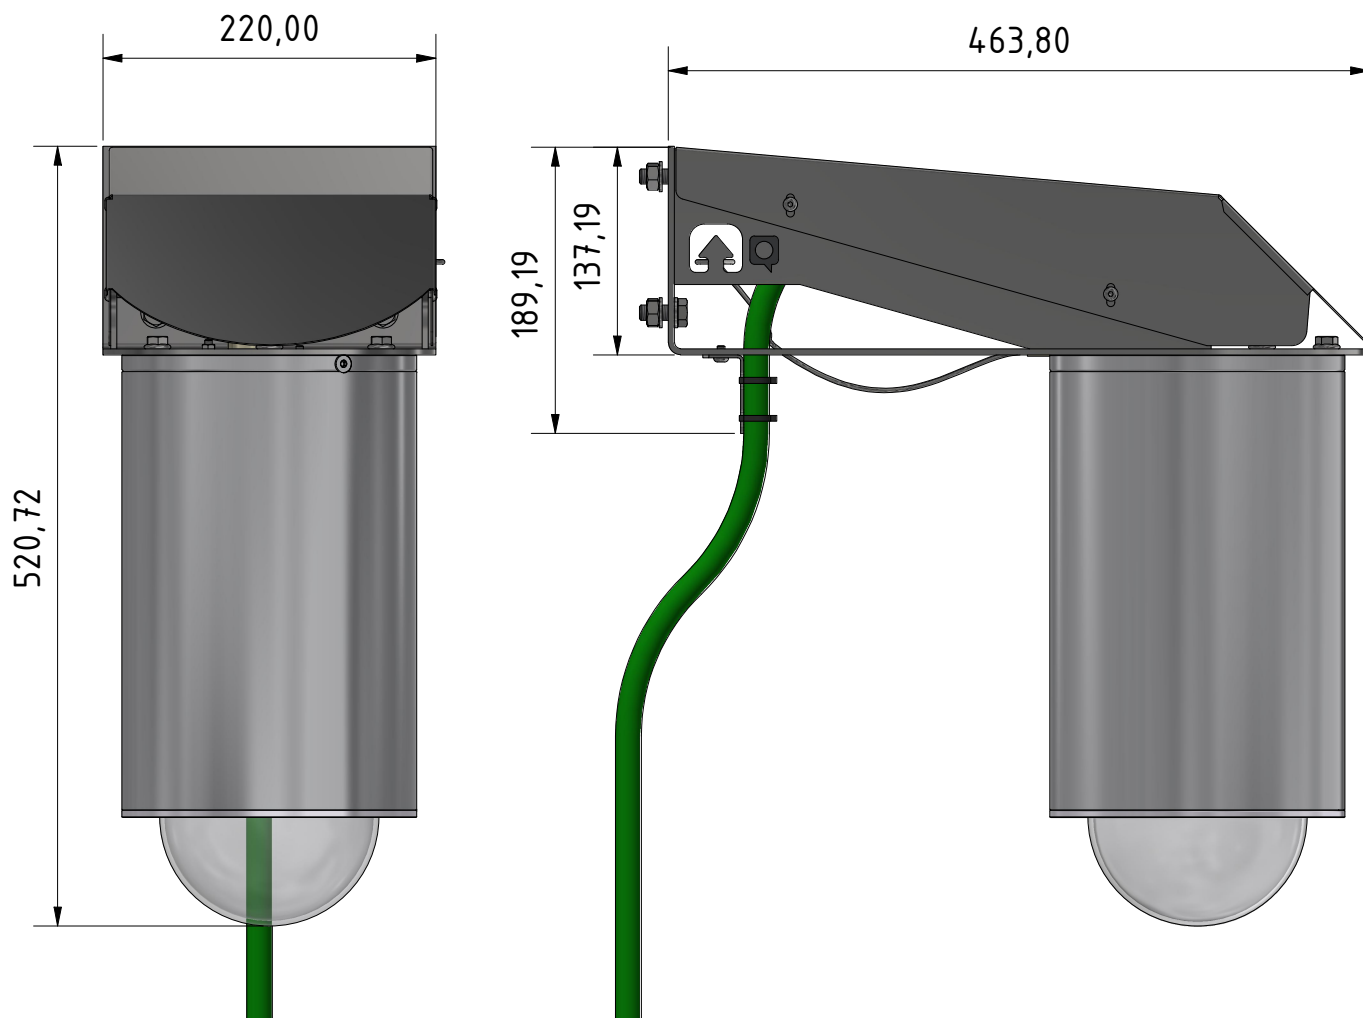

Wiring in accordance to
DIN EN 60079-14:2014 (IEC 60079-14:2013) !

Note:
 For more information see
 other assembly instructions!

