



Assembly Instruction

product: WB-EC-g12-WMB-VA0.x/VA1.x

author: S. Weber

date: Apr. 22, 2025

doc ID: 250422-PT95MA-SW-WB-EC-g12-WMB-VA0.x;VA1.x_assembly
instruction_rev.00_ver.01.idw

passing:



INTRO



What you need:	
Wrench	13mm
Tourque -wrench	13mm

ATTENTION:
Please be careful when
working at heights !



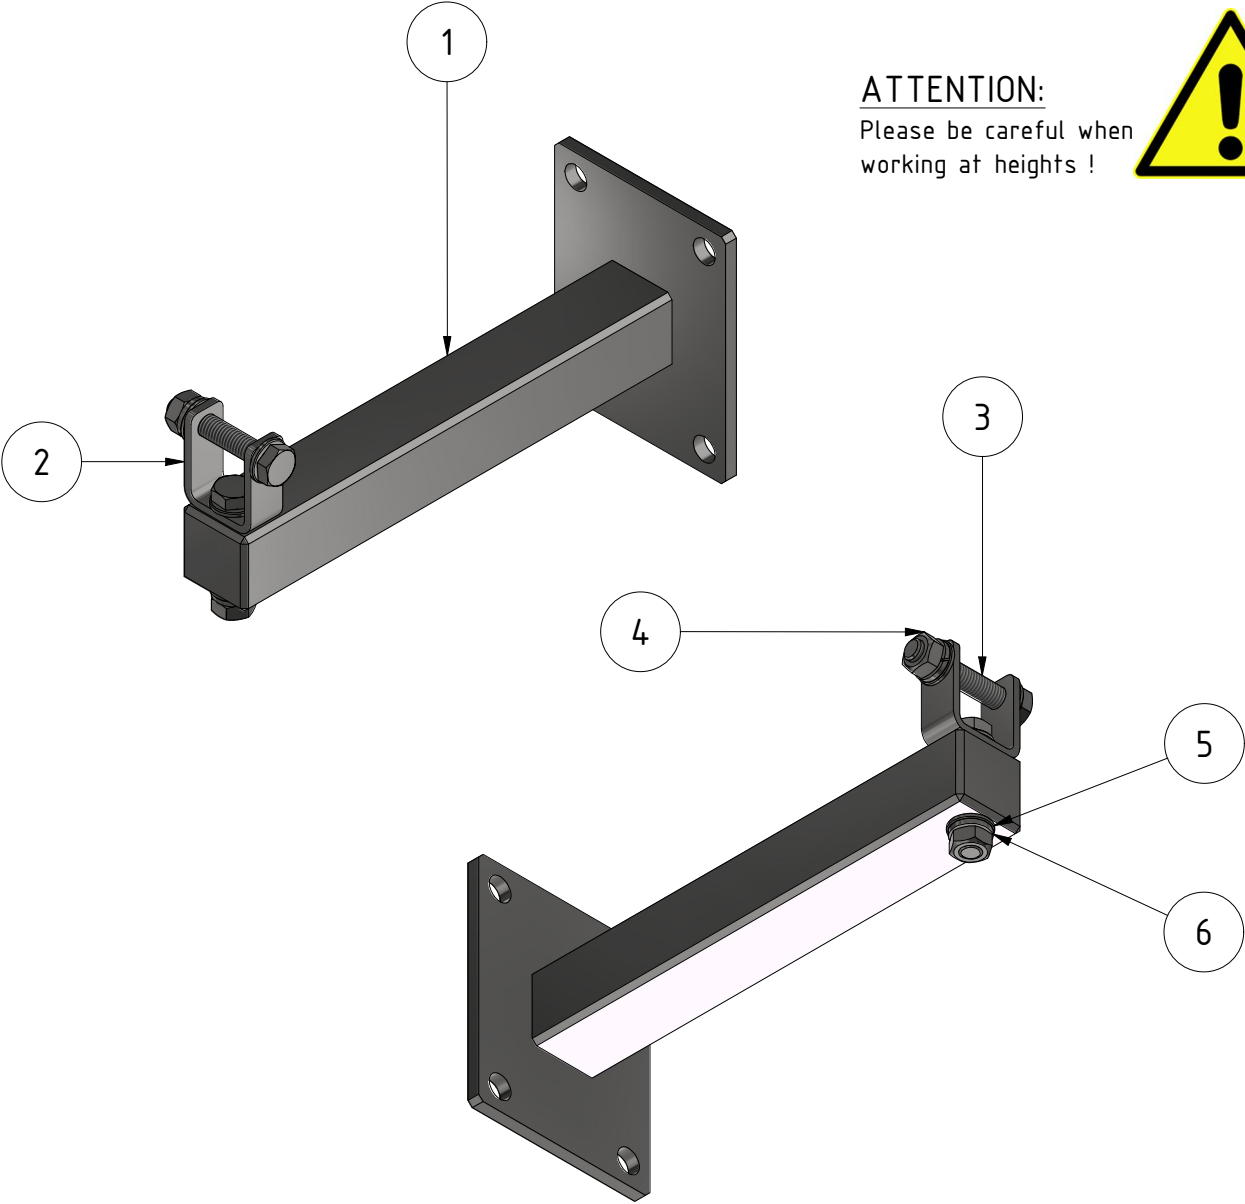


Table of content			
obj.	qty.	part	material
1	1	WMB-VA1.x	stainless steel
2	1	WMB-VA1.x fastening sheet	stainless steel
3	2	Threaded bolt DIN 933 - M8 x 45	stainless steel
4	2	Nut ISO 4032 - M8	stainless steel
5	4	Washer DIN 433 - 8,4	stainless steel
6	2	Washer DIN 7980 - A8	stainless steel

1

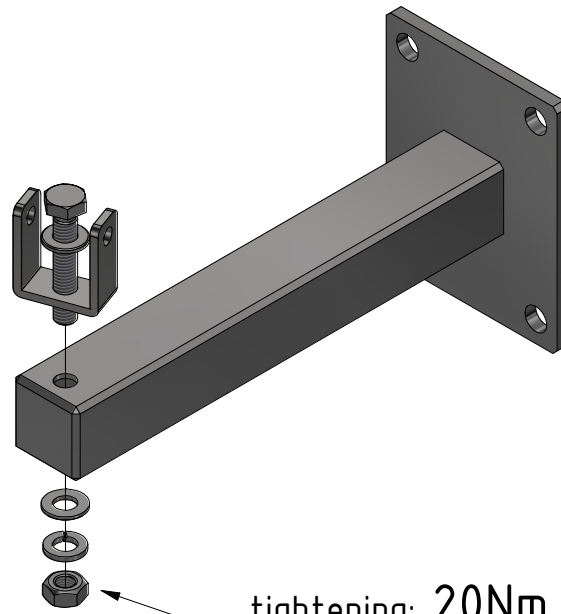

2

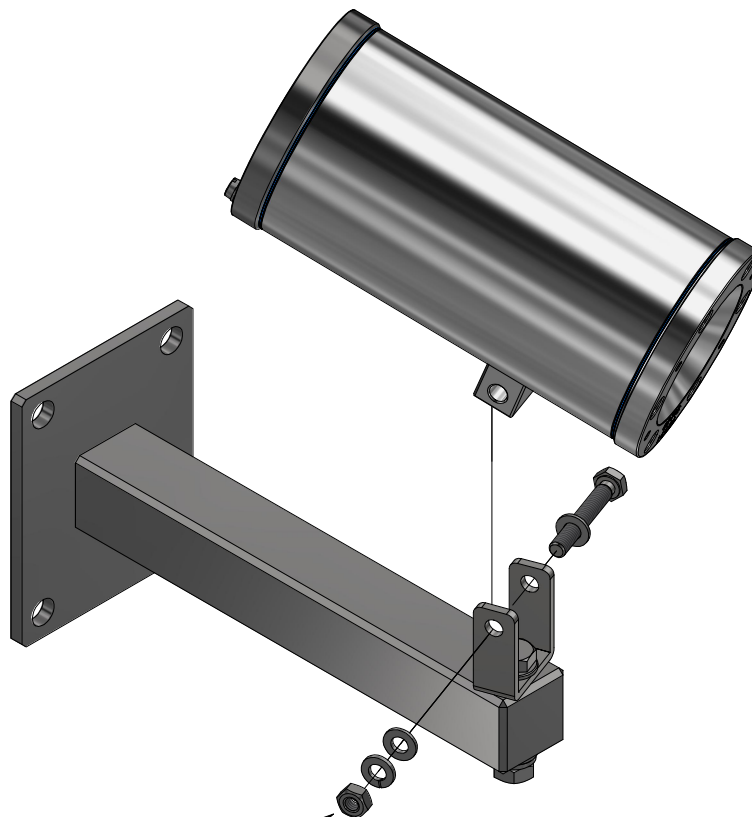




tightening: 26Nm

3



*Fasten to wall or to
PMB (pole mount bracket) !*

4

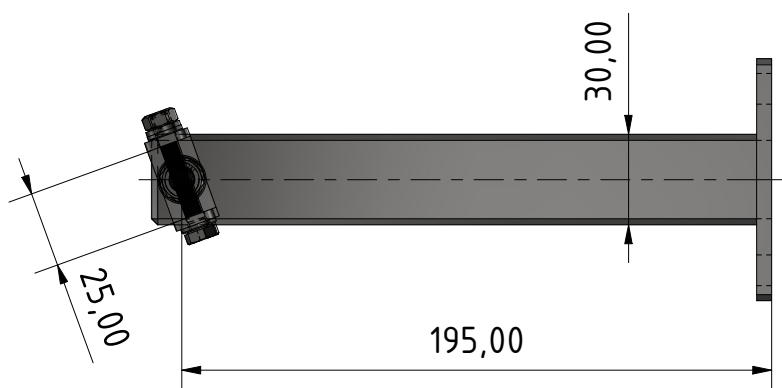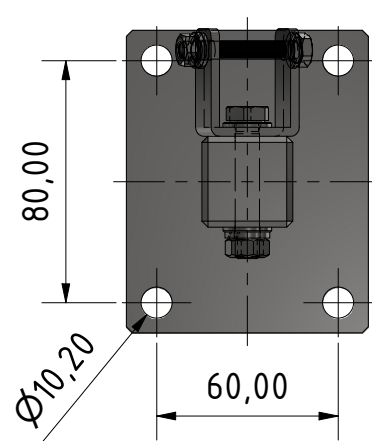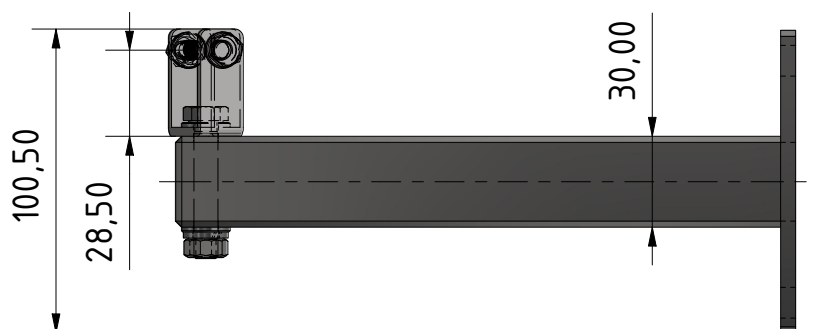

Note:

For more information see
other assambly instructions!



