



**Engineering Guideline**

## **pac-Carriers Type 9195**

**for Yokogawa Centum VP**





## Integrated solutions for Yokogawa

R. STAHL offers a wide range of customized solutions which allow the user to integrate field signals into the Yokogawa systems in an easy and cost effective manner. The solutions designed for Yokogawa cover the different ways of connecting field devices to process control systems nowadays. It ranges from carrier solutions with conventional I.S. isolators to the Remote I/O system and last but not least fieldbus solutions.

In addition to the products the R. STAHL Competence Centre provides the full range of services in consulting, engineering, commissioning and maintenance in order to contribute to Yokogawa's overall project business. We do not only regard ourselves as a manufacturer and supplier of components and systems, but also as a provider of comprehensive services.

Our engineers have many years of experience, from the engineering to the handling of smallest details, which is beneficial for you and your customer.

R. STAHL is able to manufacture completely equipped I.S. system cabinets for control room or field station. In addition to our approved R. STAHL standard components additional components from certified suppliers are used.



Example of a customer specific field station for a Yokogawa system

### Your benefits:

- Application oriented and cost optimized solutions for your customer project
- In depth consulting regarding automation solutions for hazardous locations
- Ready-made and pre-tested field stations facilitate the engineering and installation
- Experienced technical support

E-mail contact: [support.automation@stahl.de](mailto:support.automation@stahl.de)

### Integration of conventional process automation interfaces - pac-Carrier


The pac-Carrier reflects the intention of R. STAHL to provide state-of-the-art concepts tailored to the needs of Yokogawa for the field of process automation. It is designed to reduce the cost of installation by space saving compact design and simplified installation. The modules can be mounted without the need for a tool. The intrinsically safe signal is directly connected to the modules by means of three different types of detachable connectors - screw type, cage clamp type and insulating cutting type. The connection to the I/O module card is simply done by plugging the system cable into the socket of the pac- Carrier.

### Interoperability with PRM / FieldMate

The integration into the Yokogawa's PRM can be easily achieved by the selection of an appropriate type of pac-Carrier along with the ISpac HART multiplexer type 9192. The pac-Carrier picks-up the HART signals and interfaces them to the HART multiplexer.

The PRM communicates with the multiplexer via RS 485 bus. A detailed description can be found in Yokogawa's GS-file for the PRM system.

The communication between HART Mux type 9192 and PRM / FieldMate can be established by means of HART Mux DTM. The DTM can be download free of charge on the ISpac Web page.

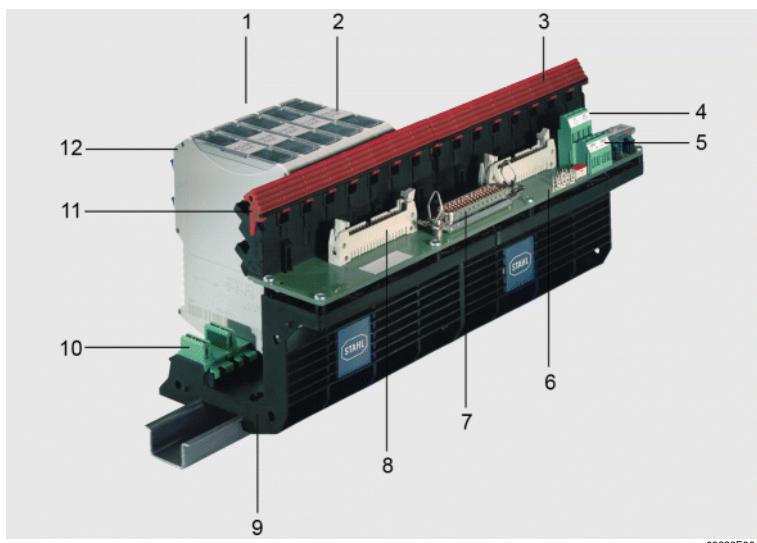

1. Detachable connectors
  - Screw terminals or
  - Cage clamp terminals or
  - Insulating cutting terminals
2. Labelling for module, slot and carrier
3. Ejector mechanism
4. Redundant and fused supply
5. Power supply failure and line fault signalling via relay
6. System card specific PCB
7. System cable plug
8. Signal duplication and/ or connection HART multiplexer
9. For DIN rail or mounting plate
10. Integrated pac bus for power supply and line-fault signalling
11. Secure snap-in mechanism, without tool
12. Single slot, any signal mixture


### Your benefits

- Complete solutions for any kind of hazardous location world-wide
- Selection of the explosions protection method which fits best your needs – technically and economically
- Competent consulting and engineering
- In-house manufacturing ensures maximum flexibility and short delivery times
- Complete range of interface solutions – barriers, isolators, remote I/O, fieldbus, HMI and camera

## HART-Multiplexer Type 9192

Basic function: multiplexer for HART field devices, 32 channels. The HART-Multiplexer type 9192 is used for digital connection of up to 32 HART-capable field devices, such as transmitters and regulating valves, to a PC. The PC communicates with the HART-Multiplexer via an RS 485 bus. The software PDM allows configuration and diagnostics of all connected HART-capable field devices, plus continuous documentation of the process variables and status.

### Interconnection:

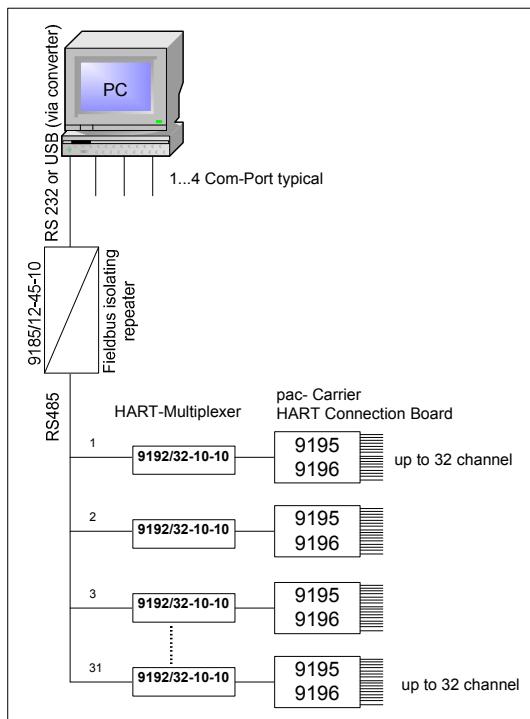


### Accessories and Spare Parts

Designation	Description	Order number
Fieldbus isolating repeater	Adjustable baud rate (1.2 kBit/s up to 1.5 MBit/s) Power supply 24 V AC/DC	9185/12-45-10s
pac-Carrier	8 slots, HART	9195/08H-....-
	16 slots, HART	9195/16H-....-
Connection board	for none Ex-applications, HART, 16 channels	9196/16H-XX0-...


STAHL

### Daisy chaining of several pac- Carriers to one HART-Multiplexer:

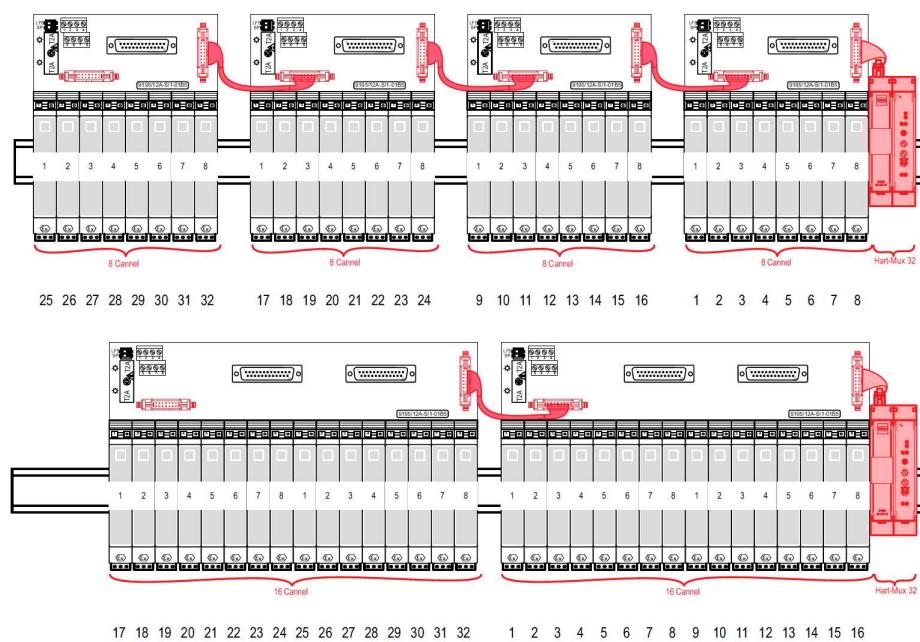

### Mounting and dismounting the ISpac module in the pac- Carrier

- The black and green terminals must be removed before installation.
- Please remove additionally the cover for the second unused socket at single channel modules (apply a screwdriver at the lower edge).
- Set the ISpac modules in place as shown in pictures and completely tilt/snap into the pac- Carrier.
- Close the red latching lever using gentle pressure. The latching lever must engage completely.
- To dismount, use a screwdriver to open the latching mechanism as shown in the picture. The module is nudged out of the slot and can be removed.

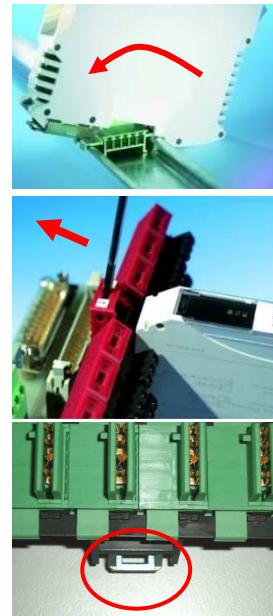


### Mounting and dismounting the ISpac module in the pac- Carrier

- Mounting position: depends on the I.S. isolators that are used (see respective instructions)
- The pac-Carriers are snapped on DIN rails, versions NS35/15 or NS35/7.5.
- After installation please check that the locks are closed properly (see picture).
- It is also possible to install the pac-Carriers on mounting plates via screws.

### Commissioning

#### 1- Connection of power supply and failure message

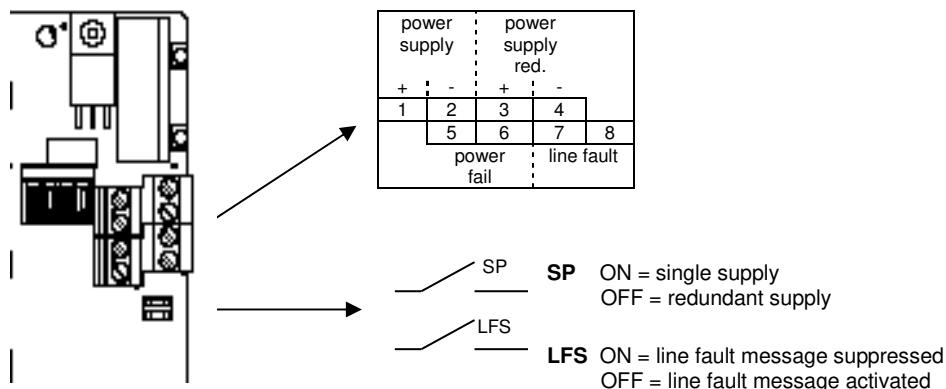


#### 2- Settings

Line Fault Message LFS		Power supply SP	
suppressed	activated *)	single	redundant *)

\*) Default factory settings

Changing settings via DIP switches during operation is also permitted in Zone 2 and Zone 22.

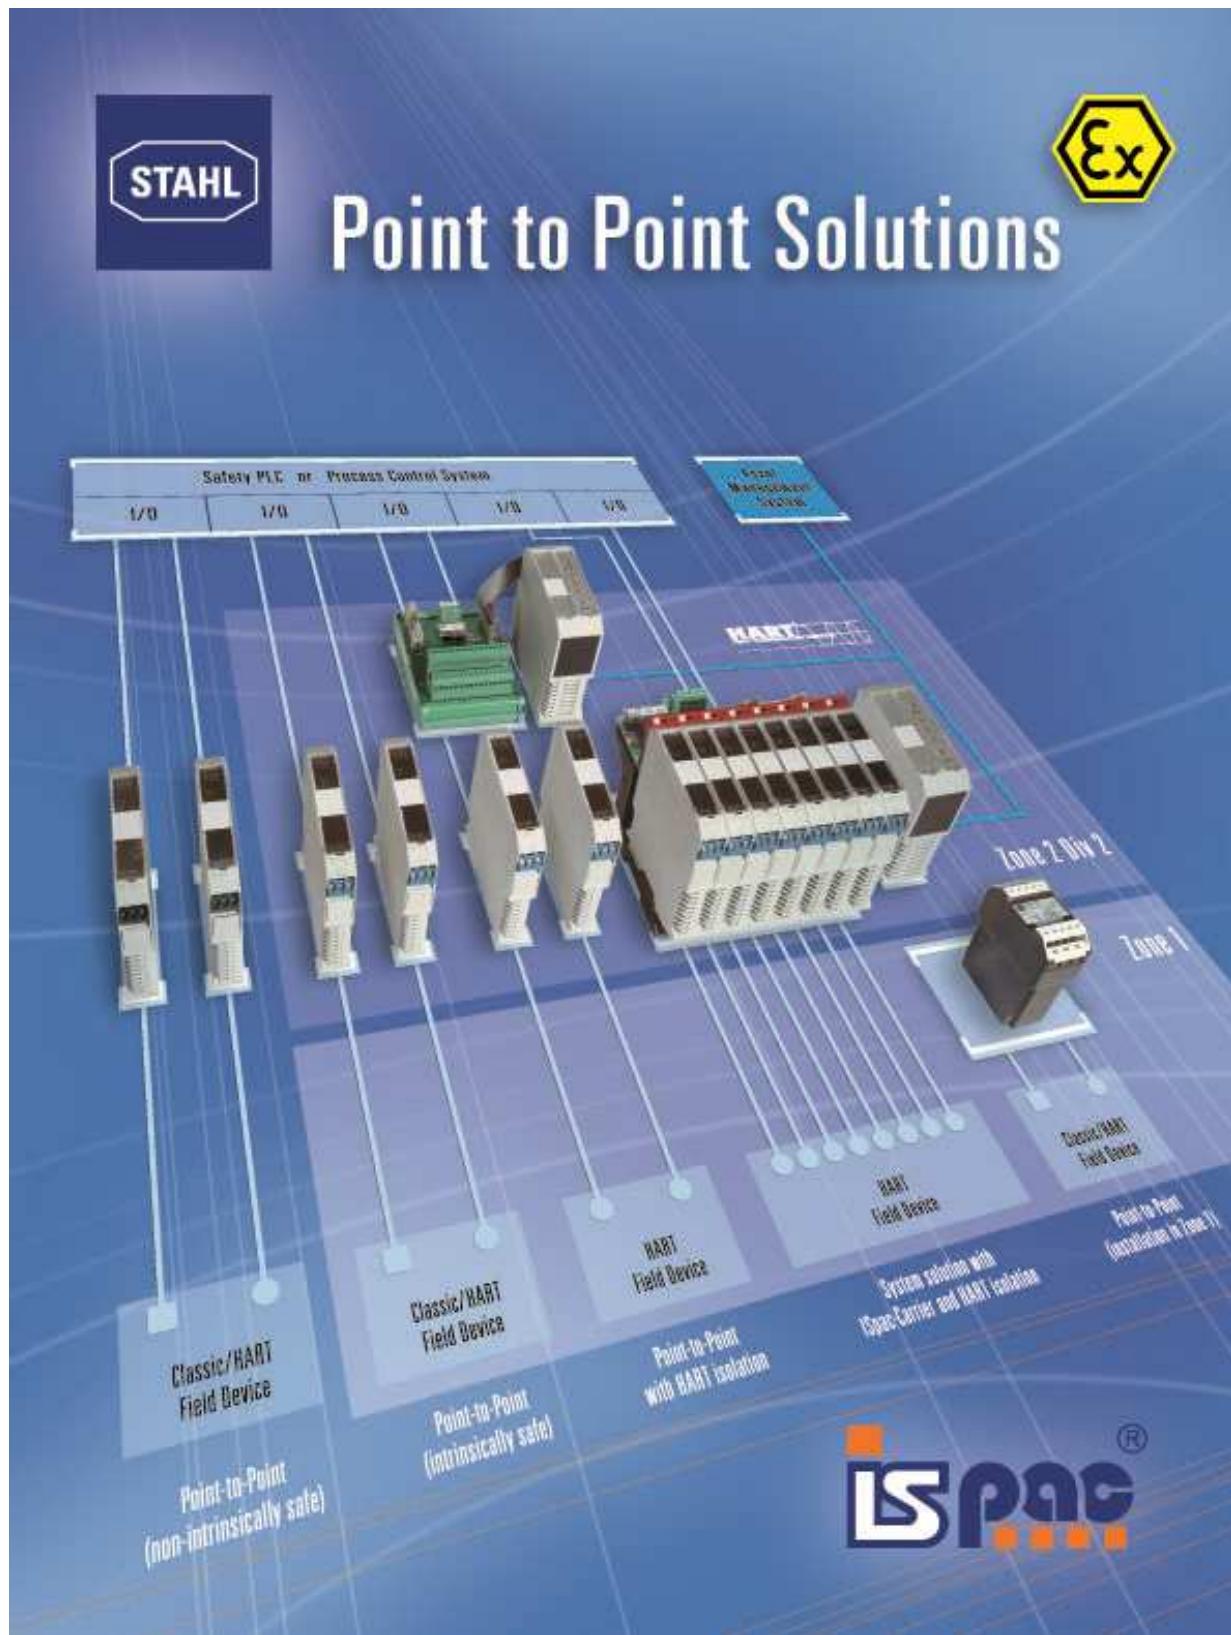

## Contents


Control system							pac-Carrier				page
Signal type	I/O cards type	Channel	Slots	Channel	HART-MUX	Redundancy	pac-Carrier type	ISpac type			
DI	ADV151	32	16	32	no	yes	9195/16A-YO1-06A2 9195/16A-YO1-06A2-C1516	9170/21-14-11 9170/21-11-11 9170/21-10-11	9-14		
	ADV161	64	32	64	no	yes	2 x 9195/16A-YO1-06A2 9195/16A-YO1-06A2-C1516	9170/21-14-11 9170/21-11-11 9170/21-10-11	9-14		
DO	ADV551	32	16	32	no	yes	9195/16A-YO1-07A2	9175/20-1.-11 9176/20-1.-00 9172/21-11-00	15-20		
	ADV561	64	32	64	no	yes	2 x 9195/16A-YO1-07A2	9175/20-1.-11 9176/20-1.-00 9172/21-11-00	15-20		
AI	AAI135	8	8	8	9192/32	yes	9195/08H-YO1-09V1	9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12	21-26		
	AAI141 / 143	16	16	16	no	no	9195/16A-YO1-01E	9160/19-11-11 (each AI 2nd output)	27-30		
	AAI141 / 143	16	8	16	9192/32	yes	9195/08H-YO1-01V1	9160/23-11-11 9163/23-11-10 9182/20-51-11 9146/20-11-11	31-35		
	AAI141 / 143	16	16	16	9192/32	yes	9195/16H-YO1-01V1	9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12	36-40		
AO	AAI543	16	8	16	9192/32	yes	9195/08H-YO1-03V1	9165/26-11-1* 9167/21-11-00	41-45		
AI & AO	AAI835	4x AI + 4xAO	8	8	9192/32	yes	9195/08H-YO1-09V1	9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12 9165/16-11-1* 9167/11-11-00	21-26		
	AAI841	8x AI + 8xAO	16	16	9192/32	yes	9195/16H-YO1-04V1	9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12 9165/16-11-1* 9167/11-11-00	46-51		
	AAI841	8x AI + 8xAO	8	16	9192/32	yes	9195/08H-YO1-04V1	9160/23-11-11 9163/23-11-10 9182/20-51-11 9146/20-11-11 9165/26-11-1* 9167/21-11-00	52-57		

**pac-Carrier**  
**9195/16A-YO1-06A2**

**9195/16A-YO1-06A2-C1516**

**For Yokogawa / Centum VP / ADV151 / ADV161**


- Signal types: up to 32 x DI for at ADV151
- Signal types: up to 64 x DI for at ADV161
- pac-Carrier for 2 x 16 modules, i.e. up to 64 signals
- pac-Carrier for 16 modules, i.e. up to 32 signals
- ISpac isolator 9170/21-14-11, 9170/21-11-11, 9170/21-10-11 can be used
- Customized system cable type AKB331, AKB337 or YUC 50 to automation System.
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22 (non conductible dust) and Div. 2

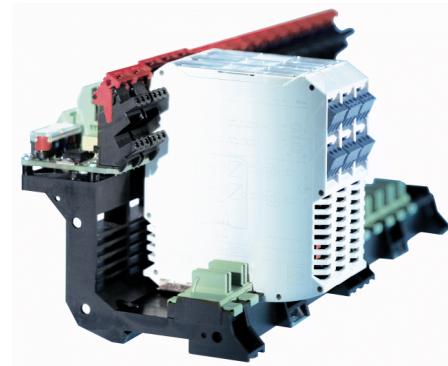

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP I/O station via system specific connection boards and system cables.


**System overview (ADV151)**

STAHL

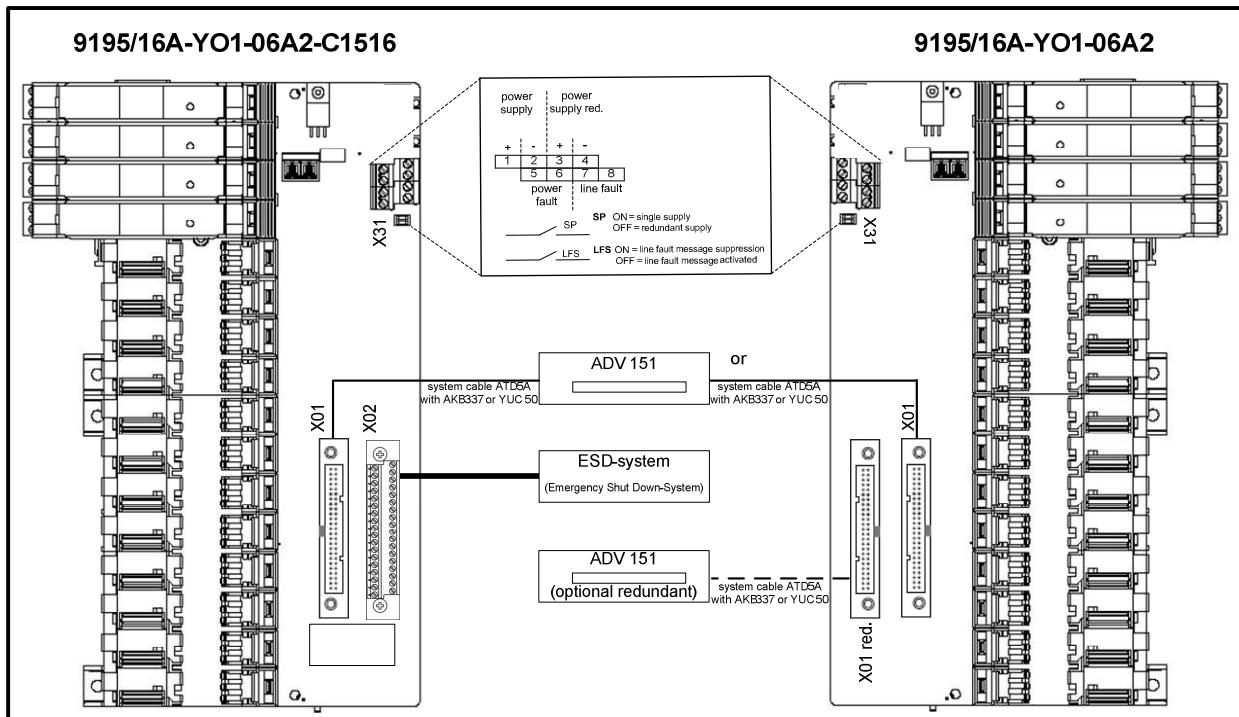

### System overview (ADV161)

System overview (ADV 161)

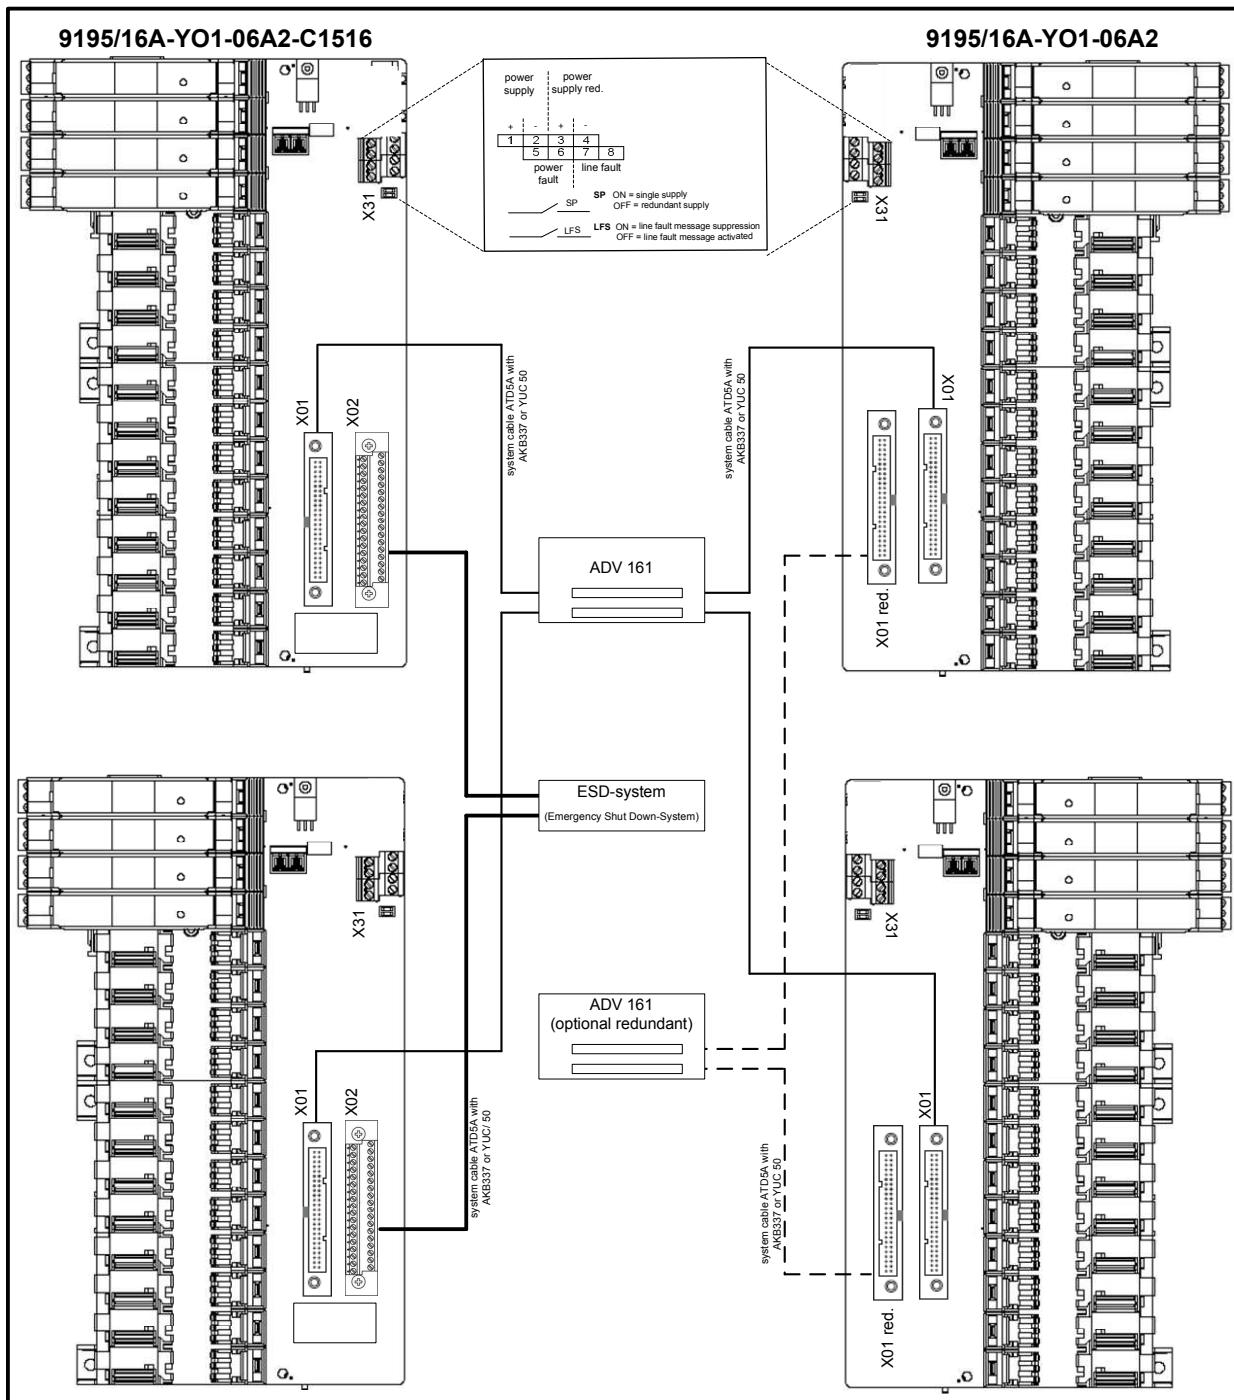

### Selection table

I/O station				pac-Carrier			
DCS manufacturer	DCS type	I/O card type	Signal type	Slots	Channels	ISpac type	Type
Yokogawa	Centum VP	ADV151	32 x DI	16	32	9170/21-11-11 9170/21-14-11	9195/16A-YO1-06A2 or 9195/16A-YO1-06A2-C1516
Yokogawa	Centum VP	ADV161	64 x DI	32	64	9170/21-10-11	2 x 9195/16A-YO1-06A2 or 2 x 9195/16A-YO1-06A2-C1516
<b>Technical data</b>							
<b>Certificates</b>		BVS 03 ATEX E213 X					
<b>Explosion protection</b>		Ex II 3 G Ex nA nC II T4 Gc					
<b>Installation</b>		In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area					
<b>Power supply</b>		(X31) 24 V DC (19 V ... 31,2 V) * yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes					
<b>Connection field devices</b>		at the terminals of the I.S. isolators (see "signal loops") up to 64 (at ADV161) up to 32 (at ADV151)					
<b>Connection automation system I</b>		(X01) plug 50 pole for AKB331, AKB337 or YUC 50 up to 64 (at ADV161) up to 32 (at ADV151)					
<b>Connection ESD system</b>		(X02) only for pac-Carrier 9195/16A-YO1-06A2-C1516 screw clamp 36-pole (32x signal, 4x GND) up to 64 (at ADV161) up to 32 (at ADV151)					
<b>Connection automation system II</b>		(X01red.) only for pac-Carrier 9195/16A-YO1-06A2-C1516 screw clamp 36-pole (32x signal, 4x GND) up to 64 (at ADV161) up to 32 (at ADV151)					
<b>Error messaging</b>		(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“ Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed					
<b>Ambient conditions</b>		max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤ 95 %					
<b>Mechanical data</b>		approx. 610 g on DIN rail, (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 V0					


\*) Note: The External power supply voltage range for the ADV151 and ADV161 is 18 ... 26.4 V DC.

### Signal loops

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).

#### Switching repeater (DI)


for NAMUR proximity switches and contacts  
- electronic output  
for pac- Carrier 9195/16A-YO1-06A2

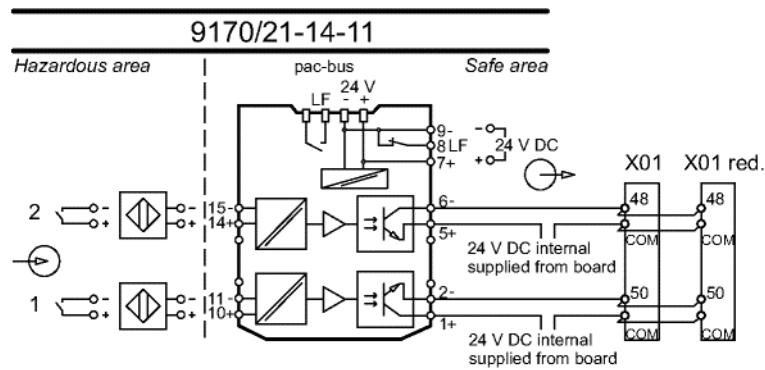

#### Switching repeater (DI)


for NAMUR proximity switches and contacts  
- relay output  
for pac- Carrier 9195/16A-YO1-06A2

Alternative: 9170/21-11-11

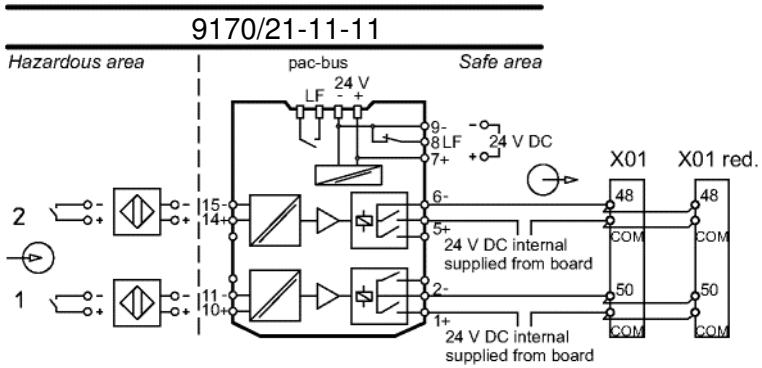


#### Switching repeater (DI)

for NAMUR proximity switches and contacts  
- 1 change-over contact  
for pac- Carrier 9195/16A-YO1-06A2

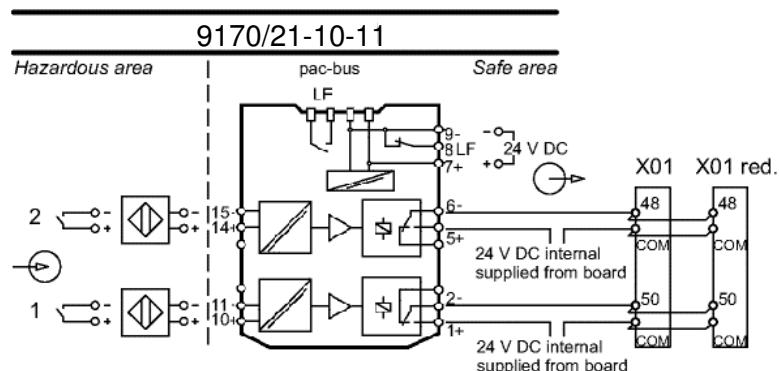


#### Switching repeater (DI)

for NAMUR proximity switches and contacts  
- electronic output  
for pac- Carrier 9195/16A-YO1-06A2-C1516

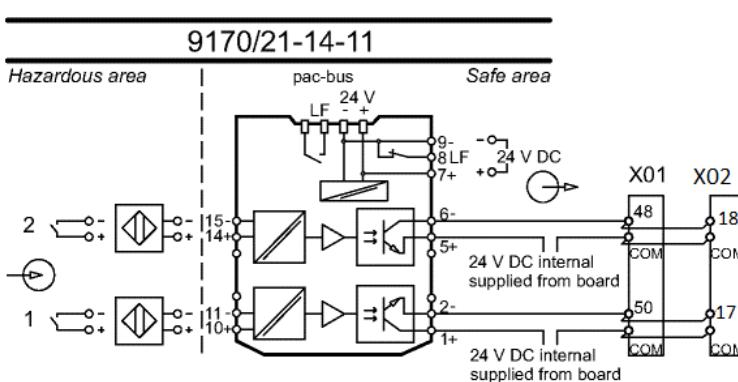


**Switching repeater (DI)**  
for NAMUR proximity switches and contacts  
- relay output  
for pac- Carrier 9195/16A-YO1-06A2 -C1516

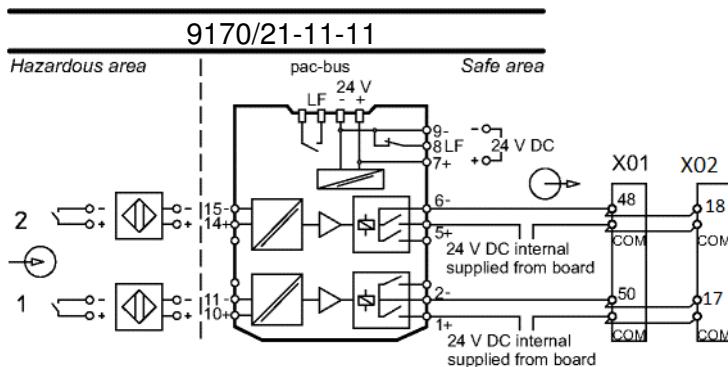

**Switching repeater (DI)**


for NAMUR proximity switches and contacts  
- 1 change-over contact  
for pac- Carrier 9195/16A-YO1-06A2-C1516

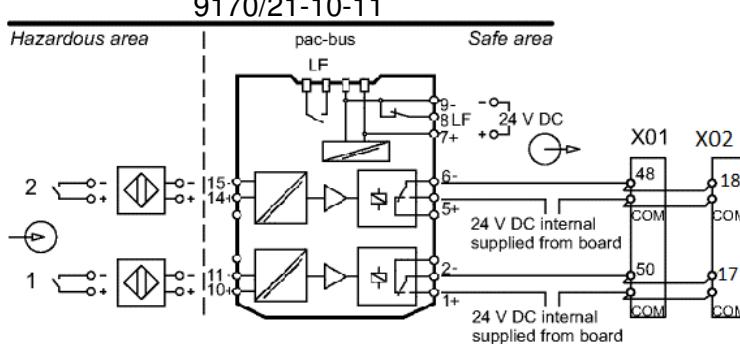

#### Accessories and Spare Parts

Designation	Illustration	Description	Order number
Non-Ex i Termination Module	06314E00	The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
Fuse	06314E00	Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

#### Dimension drawings (all dimensions in mm) - subject to alterations

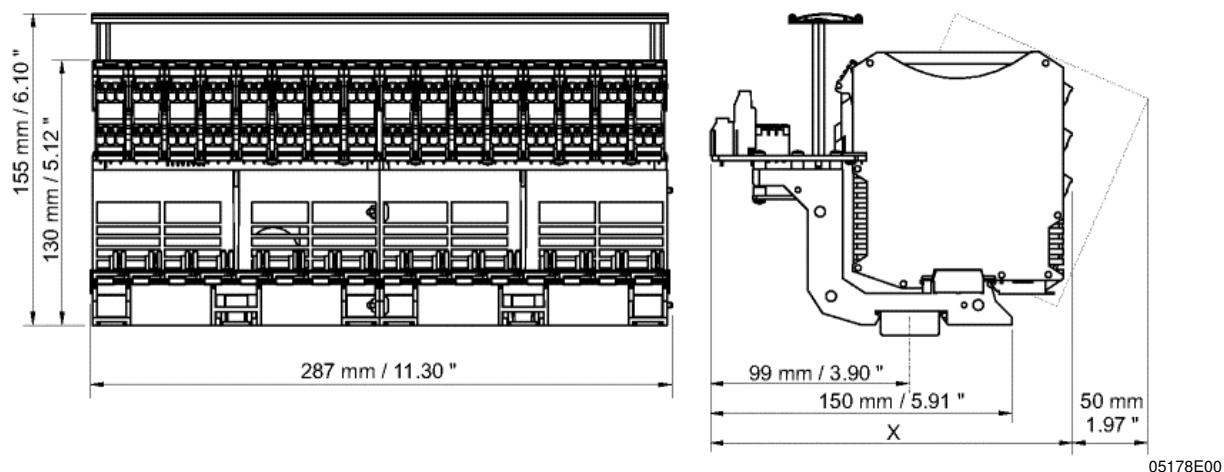

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list

terminal i.s.	Channel	Carrier slot	Input no.	pin X01 (ATD5A + AKB331) or (AKB337)	pin X01 red (ATD5A + AKB331) or (AKB337)	Screw-terminal X02
3)						
10 +	1	1	1	- 1) + 50	- 1) + 50	- 2)
11 -			2	- 1) + 48	- 1) + 48	+ 17 - 2)
14 +			3	- 1) + 46	- 1) + 46	+ 19
15 -			4	- 1) + 44	- 1) + 44	+ 20
10 +	5	2	5	- 1) + 42	- 1) + 42	+ 21
11 -			6	- 1) + 40	- 1) + 40	+ 22
14 +			7	- 1) + 38	- 1) + 38	+ 23
15 -			8	- 1) + 36	- 1) + 36	+ 24
10 +	9	3	9	- 1) + 34	- 1) + 34	+ 25
11 -			10	- 1) + 32	- 1) + 32	+ 26
14 +			11	- 1) + 30	- 1) + 30	+ 27
15 -			12	- 1) + 28	- 1) + 28	+ 28
10 +	13	4	13	- 1) + 26	- 1) + 26	+ 29
11 -			14	- 1) + 24	- 1) + 24	+ 30
14 +			15	- 1) + 22	- 1) + 22	+ 31
15 -			16	- 1) + 20	- 1) + 20	+ 32
10 +	17	5	17	- 1) + 49	- 1) + 49	+ 1
11 -			18	- 1) + 47	- 1) + 47	+ 2
14 +			19	- 1) + 45	- 1) + 45	+ 3
15 -			20	- 1) + 43	- 1) + 43	+ 4
10 +	21	6	21	- 1) + 41	- 1) + 41	+ 5
11 -			22	- 1) + 39	- 1) + 39	+ 6
14 +			23	- 1) + 37	- 1) + 37	+ 7
15 -			24	- 1) + 35	- 1) + 35	+ 8
10 +	25	7	25	- 1) + 33	- 1) + 33	+ 9
11 -			26	- 1) + 31	- 1) + 31	+ 10
14 +			27	- 1) + 29	- 1) + 29	+ 11
15 -			28	- 1) + 27	- 1) + 27	+ 12
10 +	29	8	29	- 1) + 25	- 1) + 25	+ 13
11 -			30	- 1) + 23	- 1) + 23	+ 14
14 +			31	- 1) + 21	- 1) + 21	+ 15
15 -			32	- 1) + 19	- 1) + 19	+ 16

ADV151: 32 Ch. DI  
ADV161: 2 x 32 Ch. DI

- Common; Cable AKB331/AKB337 pins 11-18 for pac-Carrier 9195/16A-YO1-06A2
- Common: X02. 'C' (4 terminals) for pac-Carrier 9195/16A-YO1-06A2-C1516
- Digital input: 9170/21-11-11 or 9170/21-10-11 or 9170/21-14-11 for pac-Carrier 9195/16A-YO1-06A2-C1516 and for pac-Carrier 9195/16A-YO1-06A2.


**STAHL**

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice. The illustration cannot be considered binding.

**pac-Carrier**  
**9195/16A-YO1-07A2**


For Yokogawa / Centum VP / ADV551 / ADV561

- Signal types: up to 32 x DO for ADV551
- Signal types: up to 64 x DO for ADV561
- pac-Carrier for 2 x 16 modules, i.e. up to 64 signals
- pac-Carrier for 16 modules, i.e. up to 32 signals
- ISpac isolator 9175/20-1\*-11, 9176/20-1\*--\*\* and 9172/21-11-00 can be used
- Customized system cable type AKB331, AKB337 or YUC 50 to automation System.
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22 (non conductible dust) and Div. 2

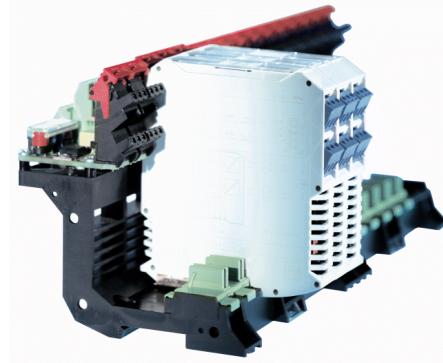


Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP I/O station via system specific connection boards and system cables.

**System overview (ADV551)**

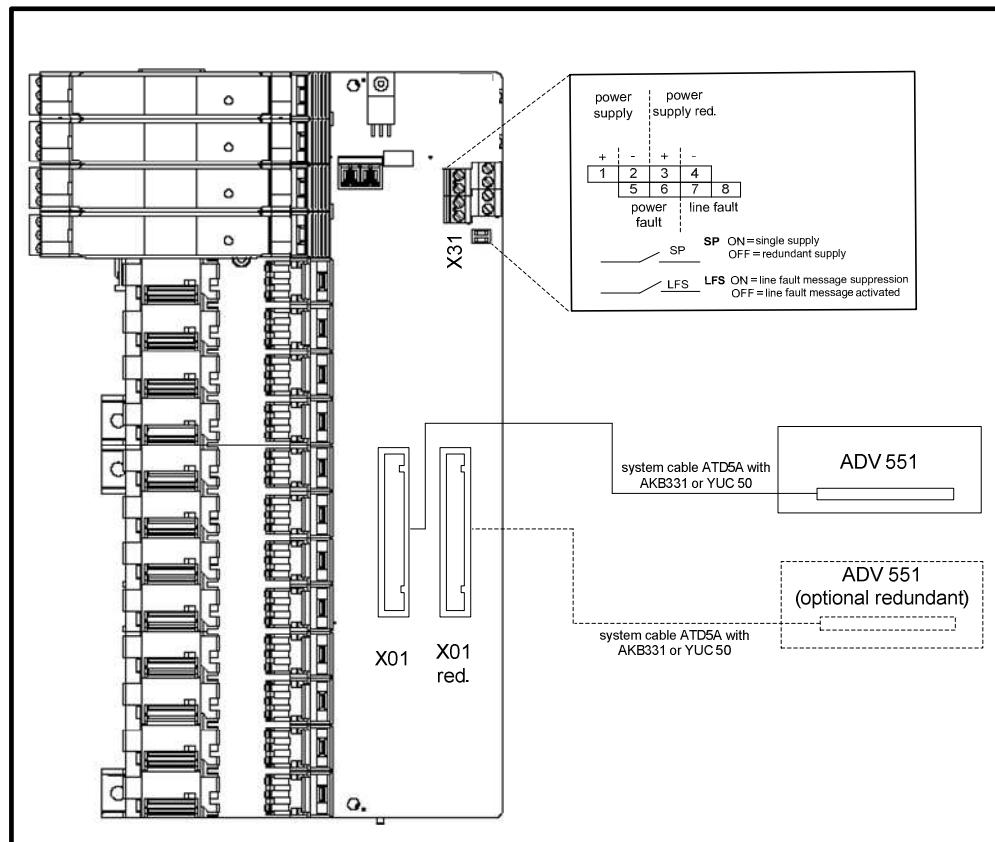

STAHL

### System overview (ADV561)

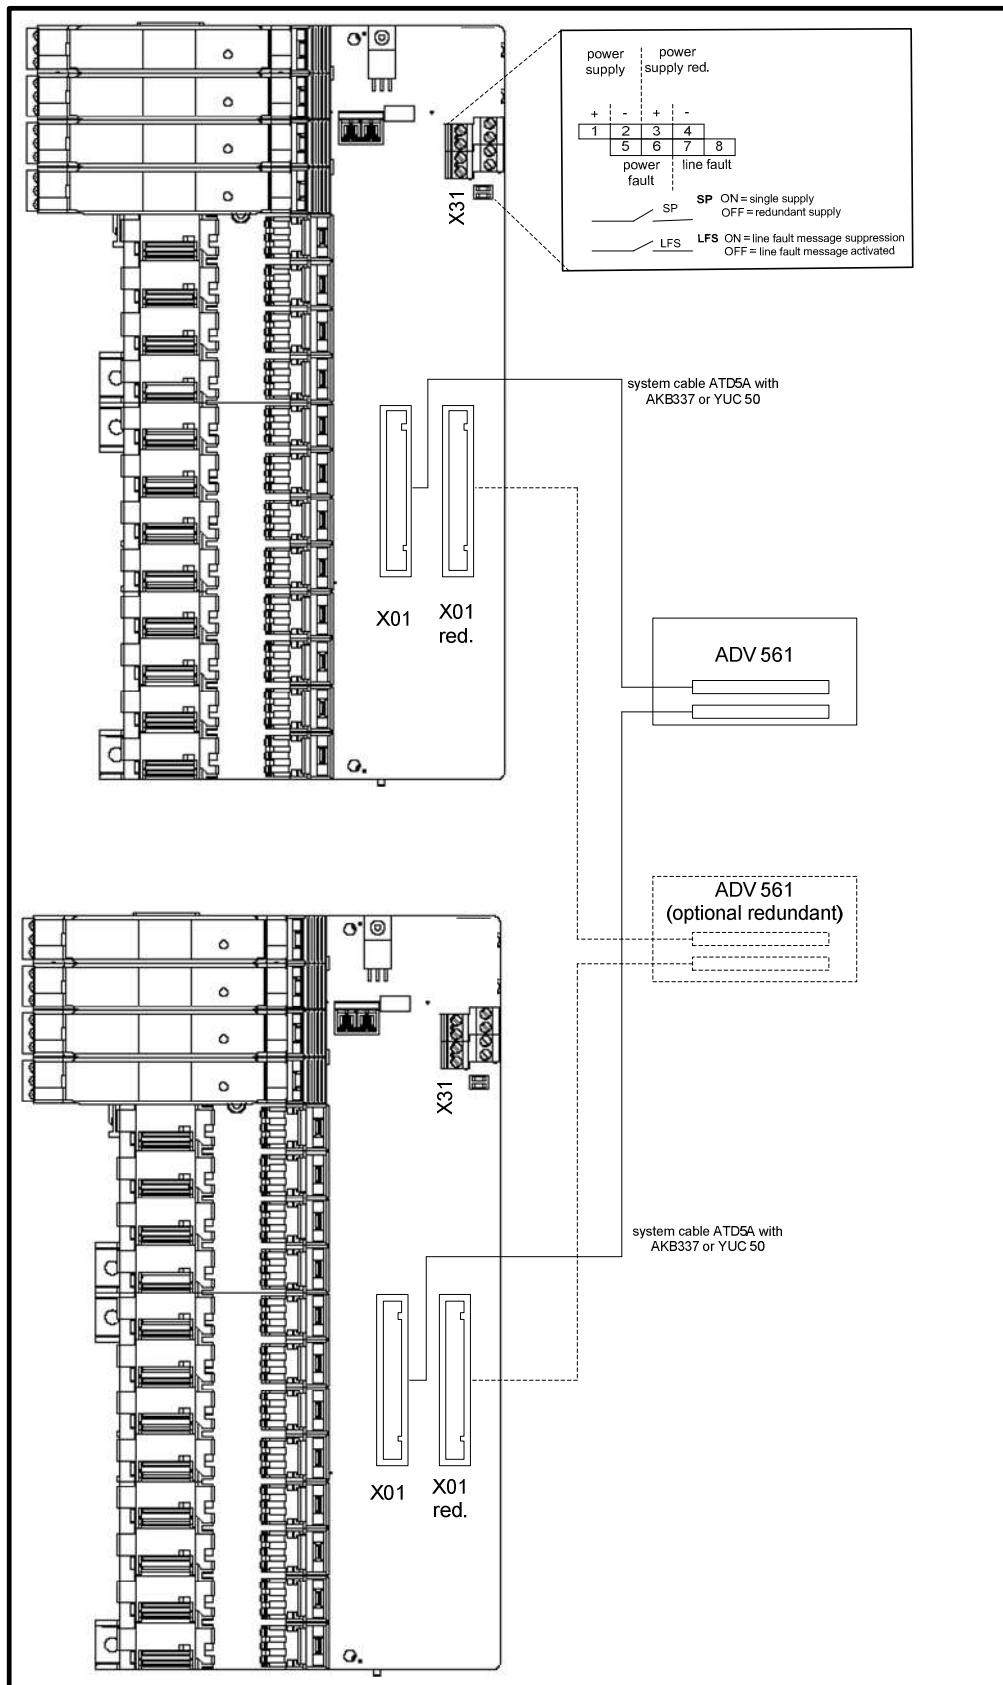

STAHL

### Selection table

I/O station				pac-Carrier			
DCS manufacturer	DCS type	I/O card type	Signal type	Slots	Channels	ISpac type	Type
Yokogawa	Centum VP	ADV551	32 x DO	16	32	9175/20-1*-11 9176/20-1*-** 9172/21-11-00	1 x 9195/16A-YO1-07A2
Yokogawa	Centum VP	ADV561	64 x DO	32	64		2 x 9195/16A-YO1-07A2

Technical data							
Certificates	BVS 03 ATEX E213 X						
Explosion protection	Ex II 3 G Ex nA nC II T4 Gc						
Installation	In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area						
Power supply	(X31)						
Nominal voltage U <sub>N</sub>	24 V DC (19 V ... 31,2 V) *						
Redundant supply	yes, decoupled with diodes						
Indication	2 LED green „PWR1“; „PWR2“						
Fuse	2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply						
Polarity reversal protection	yes						
Connection field devices							
Connection	at the terminals of the I.S. isolators (see "signal loops")						
Number of channels	up to 64 (at ADV561) up to 32 (at ADV551)						
Connection automation system	(X01, X01 red.)						
Connection	plug 50 pole for AKB331, AKB337 or YUC 50						
Number of channels	up to 64 (at ADV561) up to 32 (at ADV551)						
Error messaging	(X31)						
Power supply failure PF	Contact (35 V / 100 mA), closed in good conditions						
Line fault LF (of ISpac modules)	Contact (35 V / 100 mA), closed in good conditions						
Setting switch „SP“	Power failure message suppressed for redundant supply (single supply)						
Setting switch „LFS“	Line fault message suppressed						
Ambient conditions							
Ambient temperature	max. - 20 °C ... + 70 °C (see specification of the I.S. isolators)						
Storage temperature	- 40 °C ... + 80 °C						
Relative humidity (no condensation)	≤95 %						
Mechanical data							
Weight	approx. 610 g						
Mounting type	on DIN rail, (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6)						
Mounting position	horizontal or vertical						
Casing / Terminal protection class	IP 00 / IP 20						
Casing material	PA 6.6						
Fire protecting class (UL-94)	V0						


\*) Note: The External power supply voltage range for the ADV151 and ADV161 is 20.4 ... 26.4 V DC.

STAHL


**Signal loops**

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Digital output (DO)**  
for solenoid valves and indicators

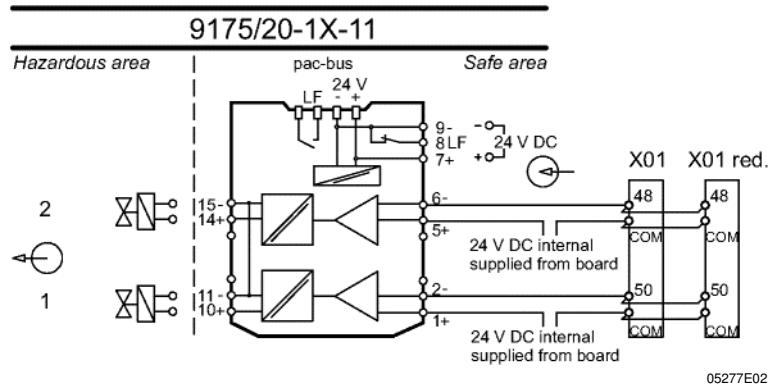

**Digital output (DO)**  
for solenoid valves and indicators

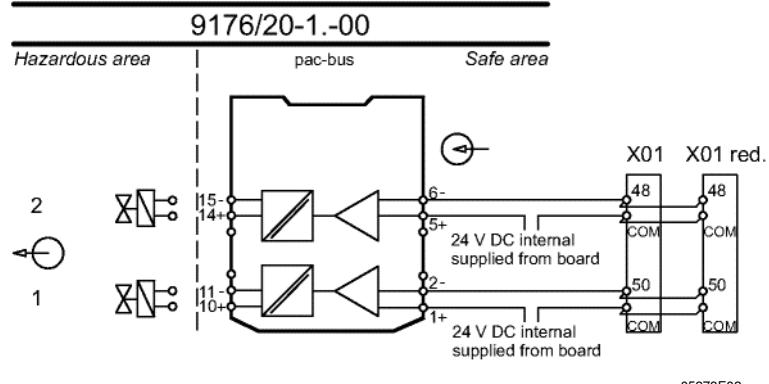


**Digital output (DO)**  
for solenoid valves and indicators

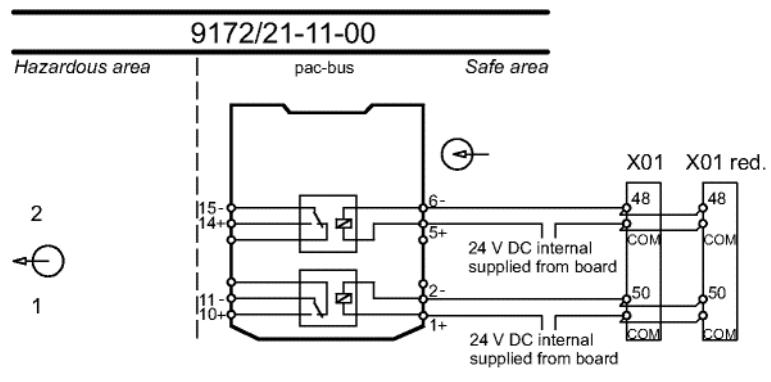

**Accessories and Spare Parts**

Designation	Illustration	Description	Order number
Non-Ex i Termination Module		The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
Fuse		Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

**Dimension drawings** (all dimensions in mm) - subject to alterations

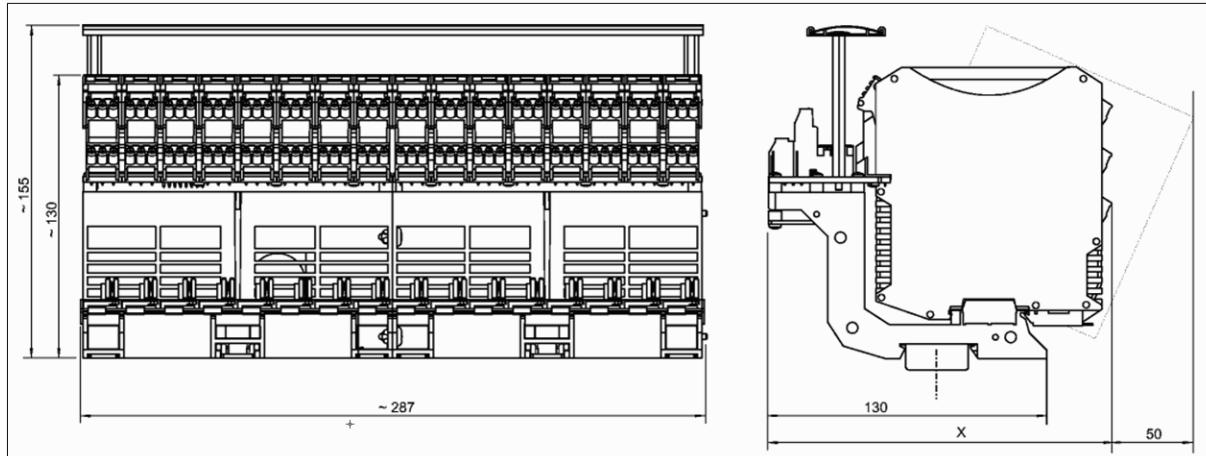

05178E00

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

STAHL

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

## Connection list

terminal i.s. 2)		channel	Carrier slot	output no.	pin X01 (ATD5A + AKB331) or (AKB337)	pin X01 red. (ATD5A + AKB331) or (AKB337)
10	+	1	1	1	- 1)	- 1)
11	-			2	+ 50	+ 50
14	+	2	2	3	- 1)	- 1)
15	-			4	+ 48	+ 48
10	+	3		5	- 1)	- 1)
11	-			6	+ 46	+ 46
14	+	4	3	7	- 1)	- 1)
15	-			8	+ 44	+ 44
10	+	5		9	- 1)	- 1)
11	-			10	+ 42	+ 42
14	+	6	4	11	- 1)	- 1)
15	-			12	+ 40	+ 40
10	+	7		13	- 1)	- 1)
11	-			14	+ 38	+ 38
14	+	8	5	15	- 1)	- 1)
15	-			16	+ 36	+ 36
10	+	9		17	- 1)	- 1)
11	-			18	+ 34	+ 34
14	+	10	6	19	- 1)	- 1)
15	-			20	+ 32	+ 32
10	+	11		21	- 1)	- 1)
11	-			22	+ 30	+ 30
14	+	12	7	23	- 1)	- 1)
15	-			24	+ 28	+ 28
10	+	13		25	- 1)	- 1)
11	-			26	+ 26	+ 26
14	+	14	8	27	- 1)	- 1)
15	-			28	+ 24	+ 24
10	+	15		29	- 1)	- 1)
11	-			30	+ 22	+ 22
14	+	16	9	31	- 1)	- 1)
15	-			32	+ 20	+ 20
10	+	17		33	- 1)	- 1)
11	-			34	+ 49	+ 49
14	+	18	10	35	- 1)	- 1)
15	-			36	+ 47	+ 47
10	+	19		37	- 1)	- 1)
11	-			38	+ 45	+ 45
14	+	20	11	39	- 1)	- 1)
15	-			40	+ 43	+ 43
10	+	21		41	- 1)	- 1)
11	-			42	+ 41	+ 41
14	+	22	12	43	- 1)	- 1)
15	-			44	+ 39	+ 39
10	+	23		45	- 1)	- 1)
11	-			46	+ 37	+ 37
14	+	24	13	47	- 1)	- 1)
15	-			48	+ 35	+ 35
10	+	25		49	- 1)	- 1)
11	-			50	+ 33	+ 33
14	+	26	14	51	- 1)	- 1)
15	-			52	+ 31	+ 31
10	+	27		53	- 1)	- 1)
11	-			54	+ 29	+ 29
14	+	28	15	55	- 1)	- 1)
15	-			56	+ 27	+ 27
10	+	29		57	- 1)	- 1)
11	-			58	+ 25	+ 25
14	+	30	16	59	- 1)	- 1)
15	-			60	+ 23	+ 23
10	+	31		61	- 1)	- 1)
11	-			62	+ 21	+ 21
14	+	32		63	- 1)	- 1)
15	-			64	+ 19	+ 19

ADV551: 32 Ch. DI  
ADV561: 64 Ch. DI


1. Common; Cable AKB331/AKB337 pins 11-18
2. digital input: digital output: 9175/20-12-11 or 9175/20-14-11 or 9175/20-16-11 or 9176/20-12-00 or 9176/20-1\*-00 or 9172/21-11-00

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice. The illustration cannot be considered binding.

**pac-Carrier**  
**9195/08H-YO1-09V1**

**For Yokogawa / Centum VP / AAI135 / AAI835**


- Signal types: 8 x AI for Centum VP AAI135
- Signal types: 4 x AI + 4 x AO for Centum VP AAI835
- pac-Carrier for 8 modules, up to 8 signals
- ISpac isolator AI 9160/13-11-11, 9163/13-11-10, 9182/10-51-11, 9146/10-11-12, AO 9165/16-11-10, 9167/11-11-00 can be used
- Connection to HART-management systems
- Customized system cable type KS1 or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22  
(non conductible dust) and Div. 2

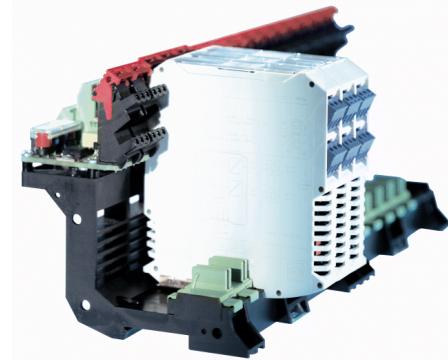

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**System overview**

**STAHL**

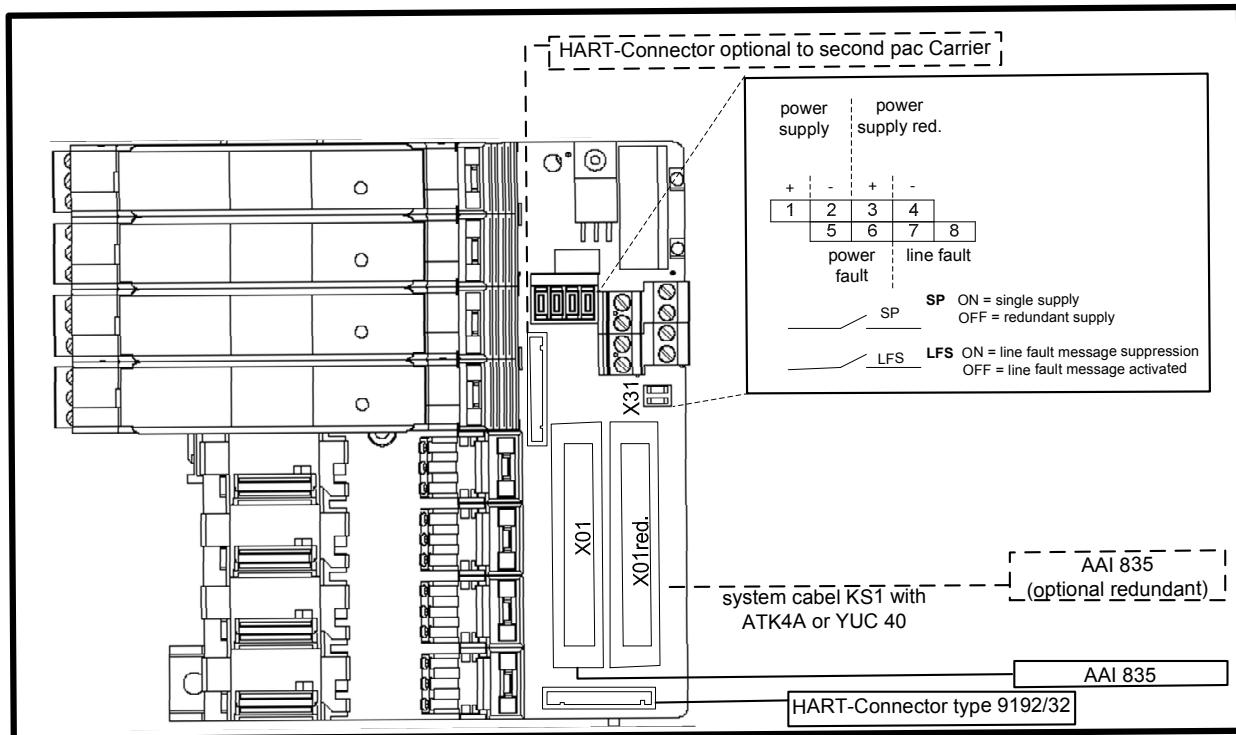

**Selection table**

Control system									pac-Carrier		
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type			
Yokogawa	Centum VP	AAI835	4 x AI + 4 x AO	8	8	9192/32	AI 9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12	AO 9165/16-11-10 9167/11-11-00	9195/08H-YO1-09V1		


**Technical data**

<b>Certificates</b>	BVS 03 ATEX E213 X
<b>Explosion protection</b>	Ex II 3 G Ex nA nC II T4 Gc
<b>Installation</b>	In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area
<b>Power supply</b>	(X31) Nominal voltage U <sub>N</sub> Redundant supply Indication Fuse Polarity reversal protection
	24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes
<b>Connection field devices</b>	
Connection	at the terminals of the I.S. isolators (specification see "signal loops")
Number of channels	8
<b>Connection automation system</b>	(X01)
Connection	2 x plug 40 pole for KS1 or YUC 40 cable
Number of channels	up to 8 (additional 8 redundant channels available)
<b>HART interface</b>	
Connector X1	HART connector 14 pole (to HART Multiplexer type 9192/32 or to first pac- Carrier)
Connector X2	HART connector optional to second pac- Carrier
<b>Error messaging</b>	(X31)
Power supply failure PF	Contact (35 V / 100 mA), closed in good conditions
Line fault LF (of ISpac modules)	Contact (35 V / 100 mA), closed in good conditions
Setting switch „SP“	Power failure message suppressed for redundant supply (single supply)
Setting switch „LFS“	Line fault message suppressed
<b>Ambient conditions</b>	
Ambient temperature	max. - 20 °C ... + 70 °C (see specification of the I.S. isolators)
Storage temperature	- 40 °C ... + 80 °C
Relative humidity (no condensation)	≤ 95 %
<b>Mechanical data</b>	
Weight	approx. 320 g
Mounting type	on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6)
Mounting position	horizontal or vertical
Casing / Terminal protection class	IP 00 / IP 20
Casing material	PA 6.6
Fire protecting class (UL-94)	V0


## Signal loops

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Transmitter supply unit (AI)**  
 for 2-, 3-wire transmitter and mA-sources for 2-wire transmitter with HART  
 slot 1 ... 8 for AAI135  
 slot 1 ... 4 for AAI835

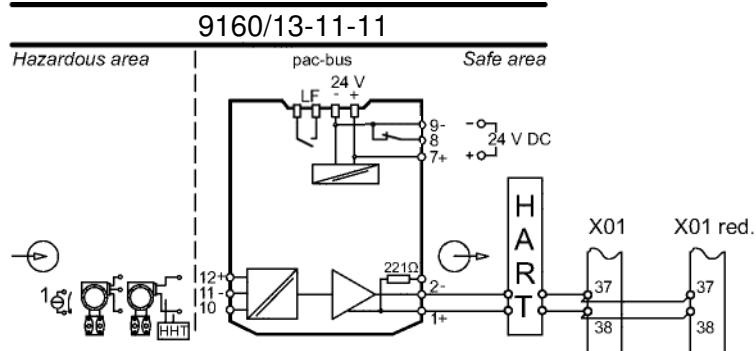


**Isolating repeater (AI)**  
 for 4-wire transmitter and mA-sources  
 bi-directional HART communication  
 slot 1 ... 8 for AAI135  
 slot 1 ... 4 for AAI835

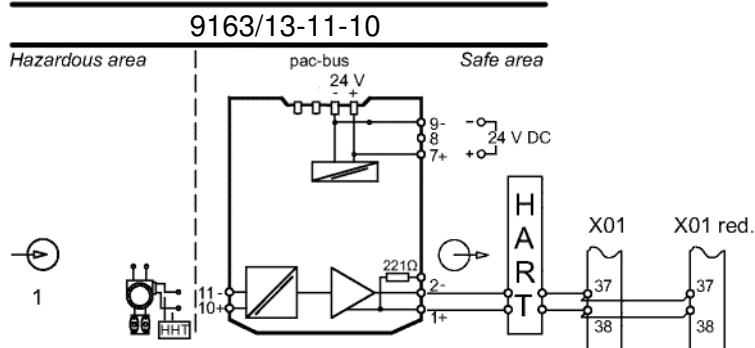

**Temperature transmitter (AI)**  
 for resistance thermometer,  
 thermocouple and RTD  
 (Configuration by means of DIP  
 switches or ISpac Wizard software)  
 slot 1 ... 8 for AAI135  
 slot 1 ... 4 for AAI835

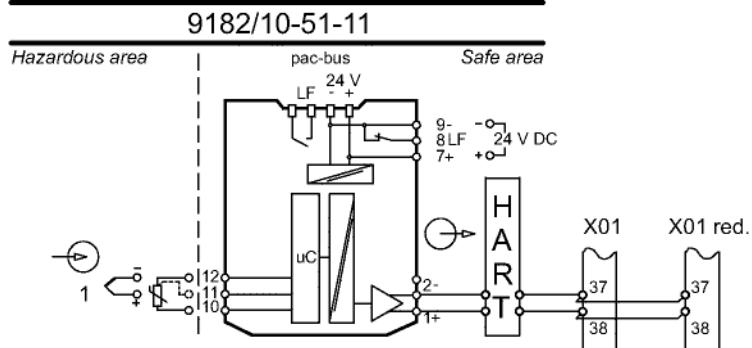

**Frequency transmitter (AI)**  
 The frequency transmitter allows  
 to monitor the speed of rotating  
 devices in the hazardous area  
 slot 1 ... 8 for AAI135  
 slot 1 ... 4 b for AAI835

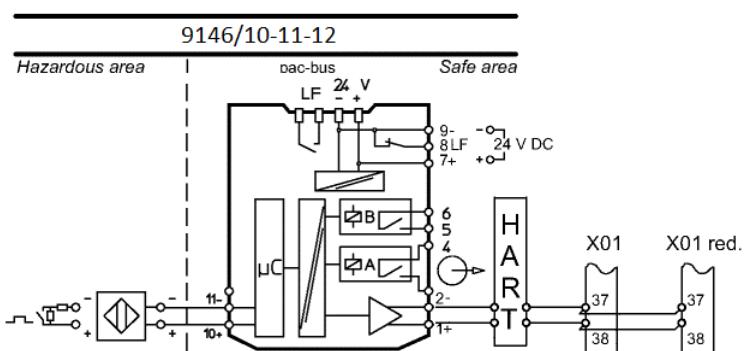


STAHL


**Signal loops****Isolating repeater (AO)**

for control valves, i/p-convertisers or indicators  
bi-directional HART communication  
slot 5 ... 8 for AAI835

Alternative: 9165/16-11-11

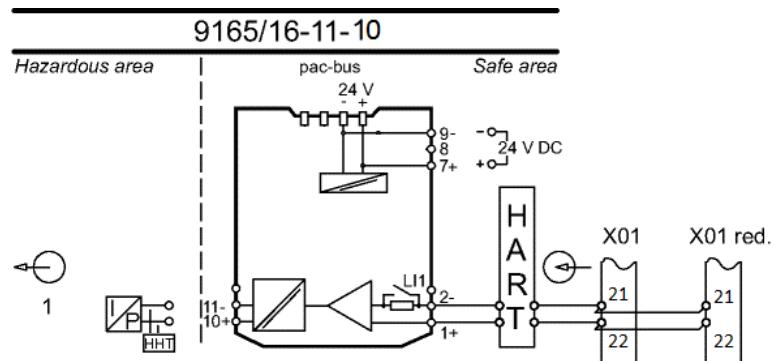
**Isolating repeater (AO)**

Loop-powered, for control valves,  
i/p-convertisers or indicators  
bi-directional HART communication  
slot 5 ... 8 for AAI835

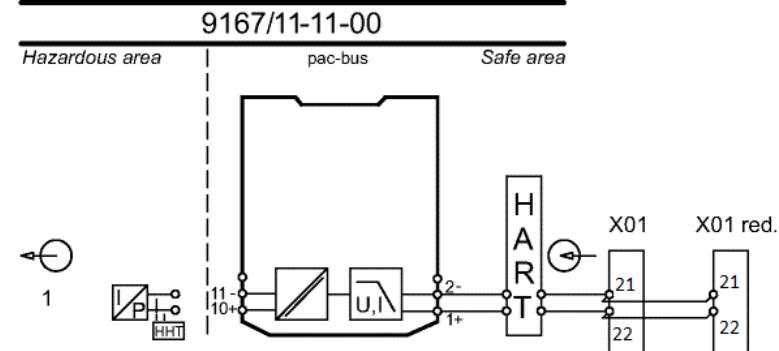**Accessories and Spare Parts**

Designation	Illustration	Description	Order number
Non-Ex i Termination Module	06314E00	The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
HART-Multiplexer	09731E00	<ul style="list-style-type: none"> <li>Used for digital connection of up to 32 HART-capable field devices to an HART management system</li> <li>Installation possible in Zone 2 and Div. 2</li> <li>Can be used up to SIL 3 (IEC 61508)</li> <li>The Device DTM is used to transmit HART information between HART compatible field devices and a FDT frame application such as Fieldmate</li> </ul>	9192/32-10-10
Fuse	T2,000A 250 V TR5	Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

**Dimension drawings** (all dimensions in mm) - subject to alterations

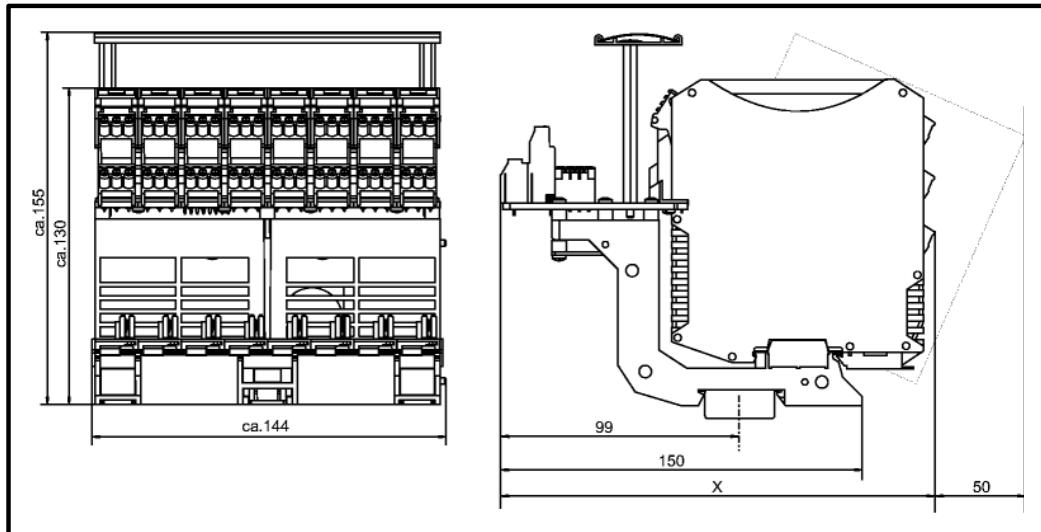

05177E00

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
 Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list (AAI835)

terminal i.s.		channel	carrier slot	output / input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
1)	+	1	1	input 1	+	38	+	38
1)	-				-	37	-	37
1)	+	2	2	input 2	+	34	+	34
1)	-				-	33	-	33
1)	+	3	3	input 3	+	30	+	30
1)	-				-	29	-	29
1)	+	4	4	input 4	+	26	+	26
1)	-				-	25	-	25
1)	+	5	5	output 1	+	22	+	22
1)	-				-	21	-	21
1)	+	6	6	output 2	+	18	+	18
1)	-				-	17	-	17
1)	+	7	7	output 3	+	14	+	14
1)	-				-	13	-	13
1)	+	8	8	output 4	+	10	+	10
1)	-				-	9	-	9

- 1) Different possibilities of field device connections; for further information's see: manual of AI: 9160/13-11-11, 9163/13-11-10, 9182/10-51-11, 9146/10-11-12 and AO: 9165/16-11-10, 9167/1\*-11-00

### Connection list (AAI135)


terminal i.s.		channel	carrier slot	output / input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
1)	+	1	1	input 1	+	38	+	38
1)	-				-	37	-	37
1)	+	2	2	input 2	+	34	+	34
1)	-				-	33	-	33
1)	+	3	3	input 3	+	30	+	30
1)	-				-	29	-	29
1)	+	4	4	input 4	+	26	+	26
1)	-				-	25	-	25
1)	+	5	5	input 5	+	22	+	22
1)	-				-	21	-	21
1)	+	6	6	input 6	+	18	+	18
1)	-				-	17	-	17
1)	+	7	7	input 7	+	14	+	14
1)	-				-	13	-	13
1)	+	8	8	input 8	+	10	+	10
1)	-				-	9	-	9

- 1) Different possibilities of field device connections; for further information's see: manual of AI: 9160/13-11-11, 9163/13-11-10, 9182/10-51-11, 9146/10-11-12.

**pac-Carrier**  
**9195/16A-YO1-01E**


For Yokogawa / Centum VP / AAI141 / 143

- Signal types: 16 x AI + each AI 2. output
- pac-Carrier for 16 modules, up to 16 signals
- ISpac isolator AI 9160/19-11-11 can be used
- Customized system cable type KS1 and adapter ATK4A or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22 (non conductible dust) and Div. 2

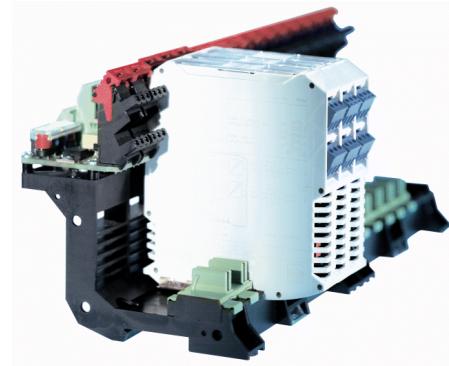

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**System overview**

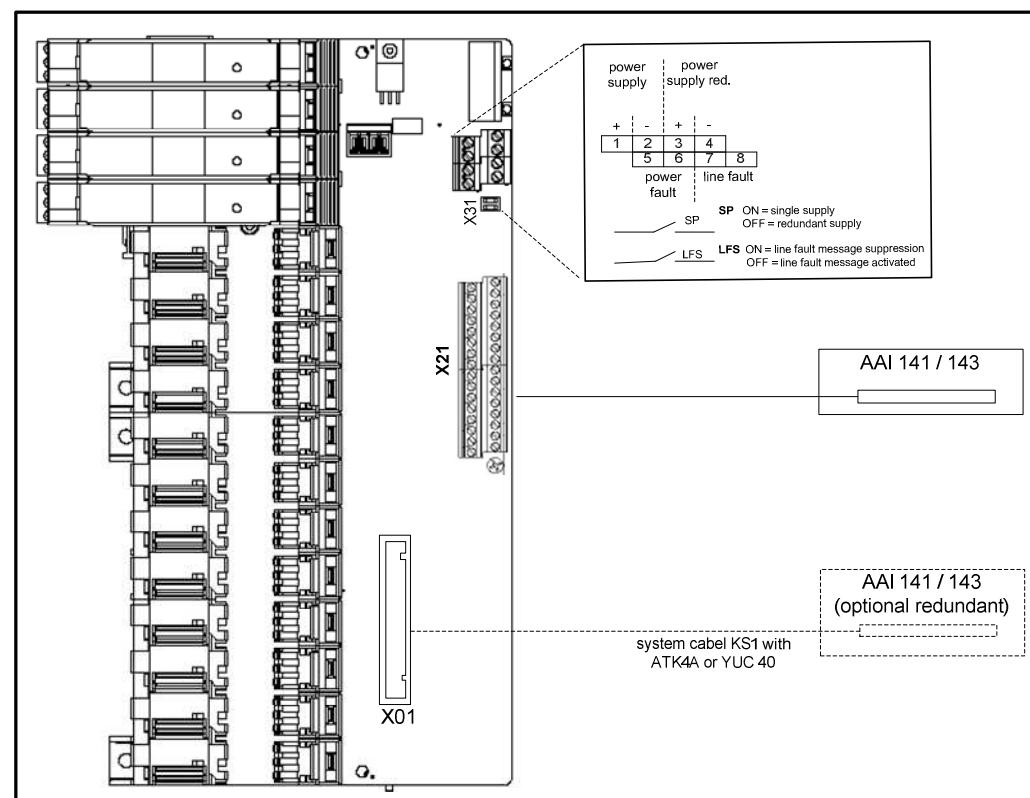


**Selection table**

Control system				pac-Carrier								
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type				
Yokogawa	Centum VP	AAI141 AAI143	8 x AI	16	16	NO	AI 9160/19-11-11	9195/16H-YO1-01E				
<b>Technical data</b>												
<b>Certificates</b>		BVS 03 ATEX E213 X										
<b>Explosion protection</b>		Ex II 3 G Ex nA nC II T4 Gc										
<b>Installation</b>		In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area										
<b>Power supply</b>		(X31) 24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes										
<b>Connection field devices</b>		at the terminals of the I.S. isolators (specification see "signal loops") 16										
<b>Connection automation system</b>		(X01)			(X21) Screw terminal up to 16							
<b>Error messaging</b>		(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“ Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed										
<b>Ambient conditions</b>		max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤95 %										
<b>Mechanical data</b>		approx. 610 g on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 V0										

## Signal loops

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Transmitter supply unit (AI)**  
for 2-, 3-wire transmitter and  
mA-sources for 2-wire transmitter with  
HART

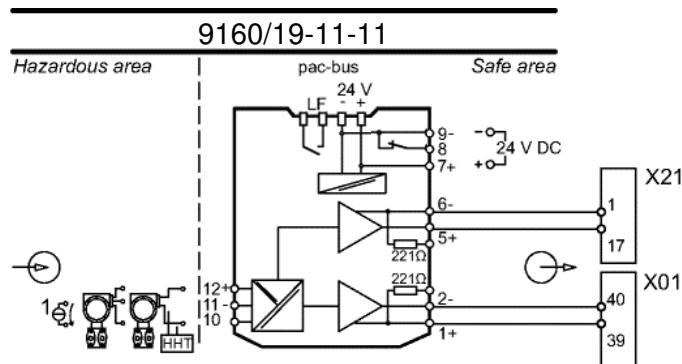

## Accessories and Spare Parts

Designation	Illustration	Description	Order number
Non-Ex i Termination Module	06314E00	The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
Fuse	T2,000A 250 V TR5	Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

## Dimension drawings (all dimensions in mm) - subject to alterations

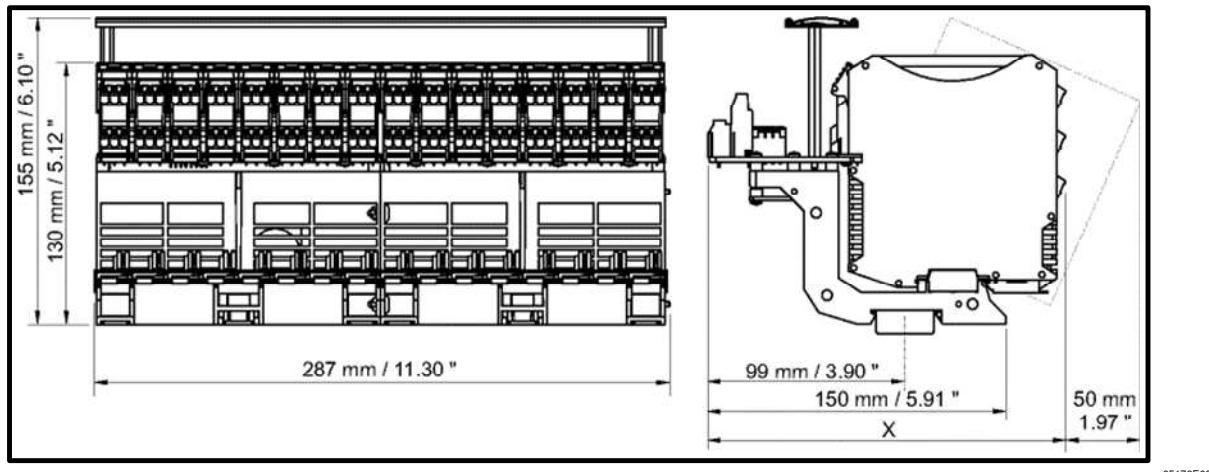

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

**Connection list**

terminal i.s.		carrier slot	channel	input no.	pin X01 system cable KS1		X 21 terminals second output	
1)	+	1	1	1	+	39	+	17
	-				-	40	-	1
1)	+	2	2	2	+	37	+	18
	-				-	38	-	2
1)	+	3	3	3	+	35	+	19
	-				-	36	-	3
1)	+	4	4	4	+	33	+	20
	-				-	34	-	4
1)	+	5	5	5	+	31	+	21
	-				-	32	-	5
1)	+	6	6	6	+	39	+	22
	-				-	30	-	6
1)	+	7	7	7	+	27	+	23
	-				-	28	-	7
1)	+	8	8	8	+	25	+	24
	-				-	26	-	8
1)	+	9	9	9	+	23	+	25
	-				-	24	-	9
1)	+	10	10	10	+	21	+	26
	-				-	22	-	10
1)	+	11	11	11	+	19	+	27
	-				-	20	-	11
1)	+	12	12	12	+	17	+	28
	-				-	18	-	12
1)	+	13	13	13	+	15	+	29
	-				-	16	-	13
1)	+	14	14	14	+	13	+	30
	-				-	14	-	14
1)	+	15	15	15	+	11	+	31
	-				-	12	-	15
1)	+	16	16	16	+	9	+	32
	-				-	10	-	16


- 1) different possibilities of field device connections; for further information see: manual of 9160/19-11-11 (1 ch.)

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice.  
The illustration cannot be considered binding.

**pac-Carrier**  
**9195/08H-YO1-01V1**

For Yokogawa / Centum VP / AAI141 / 143


- Signal types: 16 x AI
- pac-Carrier for 8 modules, up to 16 signals
- ISpac isolator AI 9160/23-11-11, 9163/23-11-10, 9182/20-51-11, 9146/20-11-11 can be used
- Connection to HART-management systems
- Customized system cable type KS1 or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22 (non conductible dust) and Div. 2

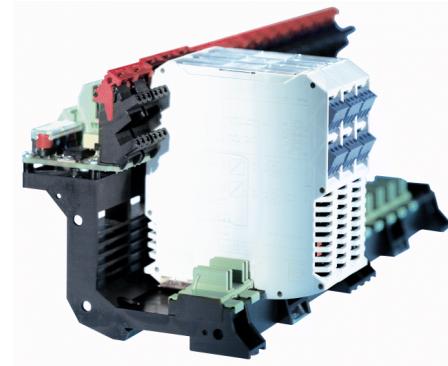

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**System overview**

STAHL

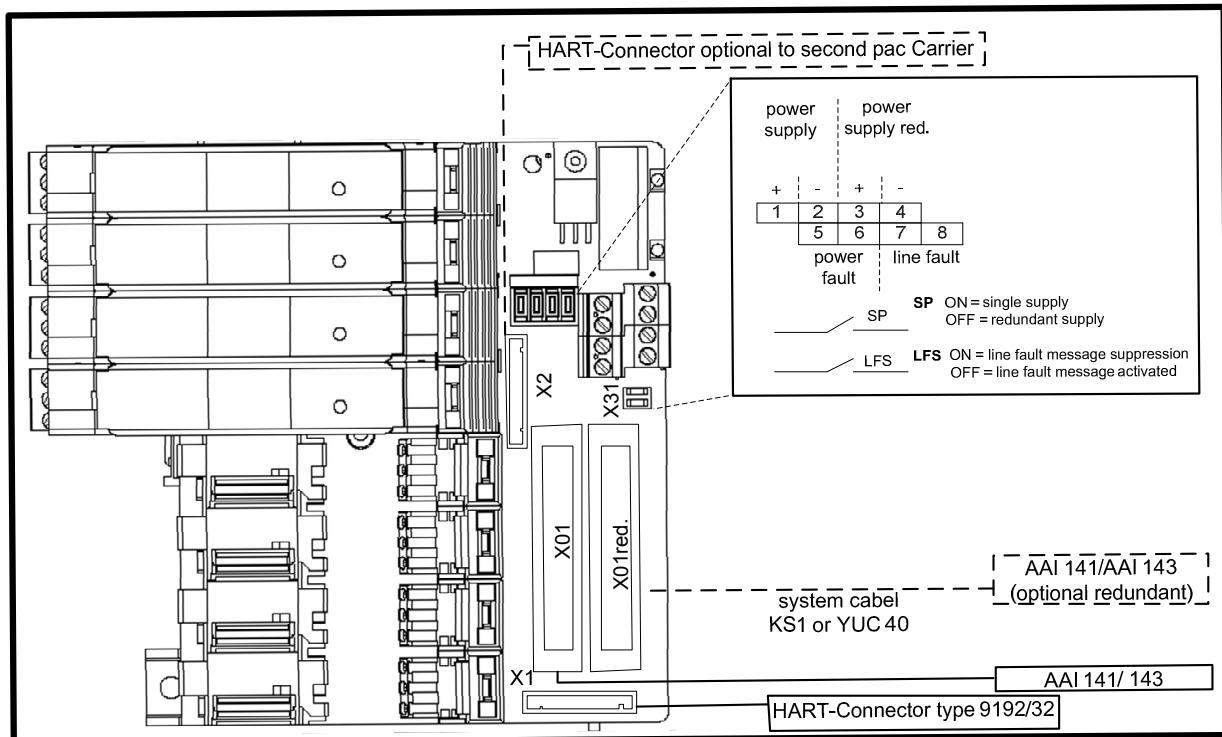


### Selection table

Control system									pac-Carrier		
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type			
Yokogawa	Centum VP	AAI141 AAI143	8 x AI	8	16	9192/32	AI 9160/23-11-11 9163/23-11-10 9182/20-51-11 9146/20-11-11	9195/08H-YO1-01V1			
<b>Technical data</b>											
<b>Certificates</b>		BVS 03 ATEX E213 X									
<b>Explosion protection</b>		Ex II 3 G Ex nA nC II T4 Gc									
<b>Installation</b>		In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area									
<b>Power supply</b>		(X31) 24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes									
<b>Connection field devices</b>		at the terminals of the I.S. isolators (specification see "signal loops") 16									
<b>Connection automation system</b>		(X01, X01 red.) 2 x plug 40 pole for KS1 or YUC 40 cable up to 16 (additional 16 redundant channels available)									
<b>HART interface</b>		HART connector 14 pole (to HART Multiplexer type 9192/32 or to first pac- Carrier) HART connector optional to second pac- Carrier									
<b>Error messaging</b>		(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“ Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed									
<b>Ambient conditions</b>		max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤ 95 %									
<b>Mechanical data</b>		approx. 320 g on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 V0									


## Signal loops

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Transmitter supply unit (AI)**  
for 2-, 3-wire transmitter and mA-sources for 2-wire transmitter with HART

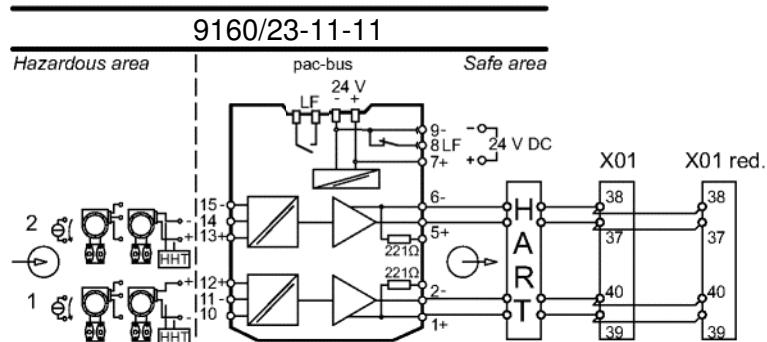


**Isolating repeater (AI)**  
for 4-wire transmitter and mA-sources  
bi-directional HART communication

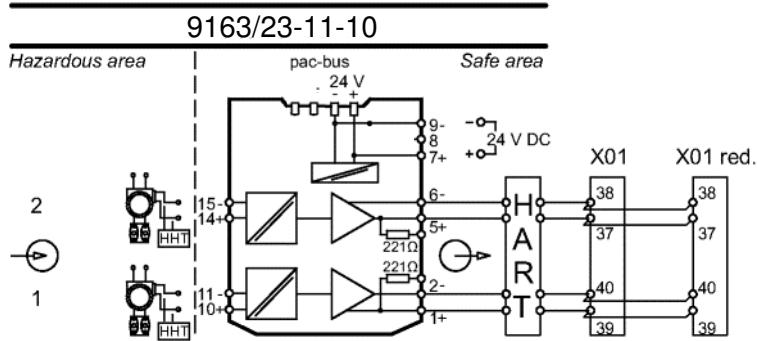

**Temperature transmitter (AI)**  
for resistance thermometer,  
thermocouple and RTD  
(Configuration by means of DIP  
switches or ISpac Wizard software)

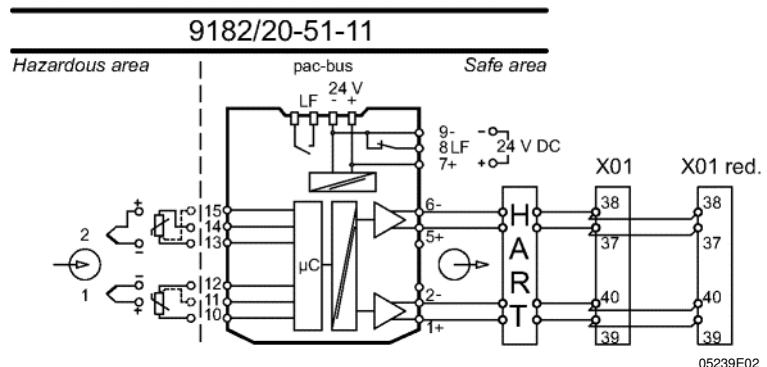


**Frequency transmitter (AI)**  
The frequency transmitter allows  
to monitor the speed of rotating  
devices in the hazardous area

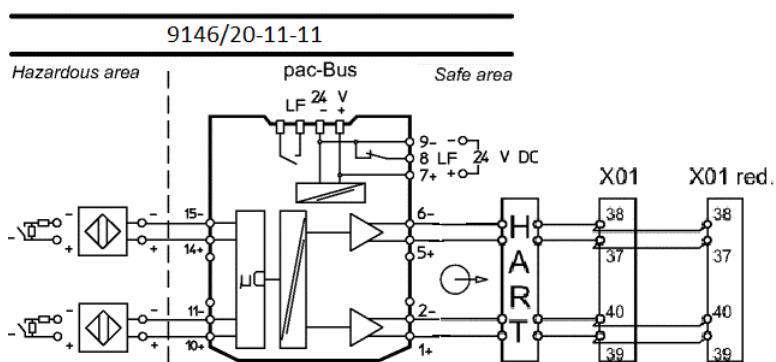

STAHL

**Accessories and Spare Parts**

Designation	Illustration	Description	Order number
Non-Ex i Termination Module		The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
HART-Multiplexer		<ul style="list-style-type: none"> <li>Used for digital connection of up to 32 HART-capable field devices to an HART management system</li> <li>Installation possible in Zone 2 and Div. 2</li> <li>Can be used up to SIL 3 (IEC 61508)</li> <li>The Device DTM is used to transmit HART information between HART compatible field devices and a FDT frame application such as Fieldmate</li> </ul>	9192/32-10-10
Fuse		Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

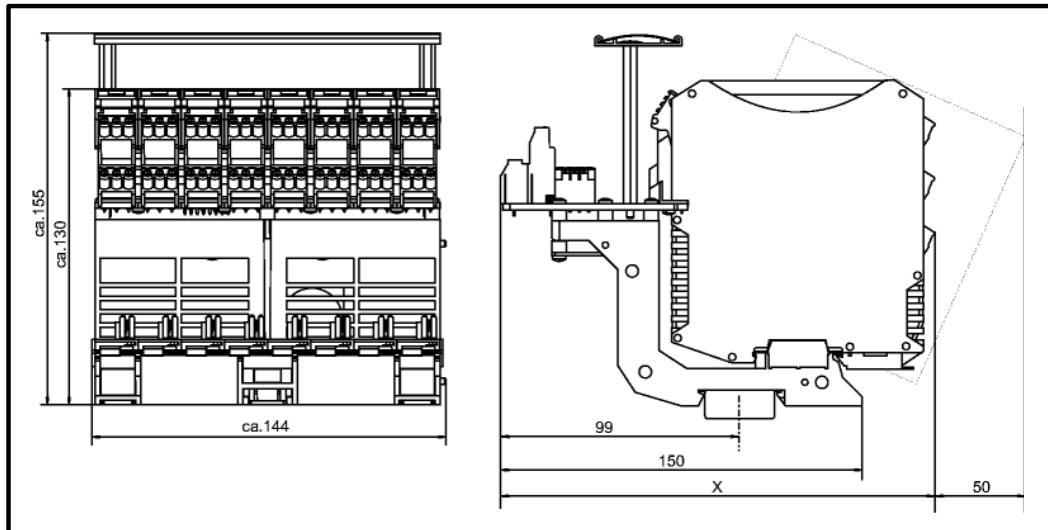**Dimension drawings** (all dimensions in mm) - subject to alterations

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
 Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list

terminal i.s.		channel	carrier slot	input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
1)	+	1	1	1	+	39	+	39
1)	-				-	40	-	40
1)	+	2	2	2	+	37	+	37
1)	-				-	38	-	38
1)	+	3	2	3	+	35	+	35
1)	-				-	36	-	36
1)	+	4	4	4	+	33	+	33
1)	-				-	34	-	34
1)	+	5	3	5	+	31	+	31
1)	-				-	32	-	32
1)	+	6	6	6	+	29	+	29
1)	-				-	30	-	30
1)	+	7	4	7	+	27	+	27
1)	-				-	28	-	28
1)	+	8	8	8	+	25	+	25
1)	-				-	26	-	26
1)	+	9	5	9	+	23	+	23
1)	-				-	24	-	24
1)	+	10	5	10	+	21	+	21
1)	-				-	22	-	22
1)	+	11	6	11	+	19	+	19
1)	-				-	20	-	20
1)	+	12	6	12	+	17	+	17
1)	-				-	18	-	18
1)	+	13	7	13	+	15	+	15
1)	-				-	16	-	16
1)	+	14	7	14	+	13	+	13
1)	-				-	14	-	14
1)	+	15	8	15	+	11	+	11
1)	-				-	12	-	12
1)	+	16	8	16	+	9	+	9
1)	-				-	10	-	10

- 1) Different possibilities of field device connections; for further information's see: manual of analog input: 9160/23-11-11 or 9163/23-11-10 or 9182/20-51-11 or 9146/20-11-11.


STAHL

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice. The illustration cannot be considered binding.

**pac-Carrier**  
**9195/16H-YO1-01V1**

**For Yokogawa / Centum VP / AAI141 / 143**


- Signal types: 16 x AI
- pac-Carrier for 16 modules, up to 16 signals
- ISpac isolator AI 9160/13-11-11, 9163/13-11-10, 9182/10-51-11, 9146/10-11-12 can be used
- Customized system cable type KS1 and adapter ATK4A or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22  
(non conductible dust) and Div. 2

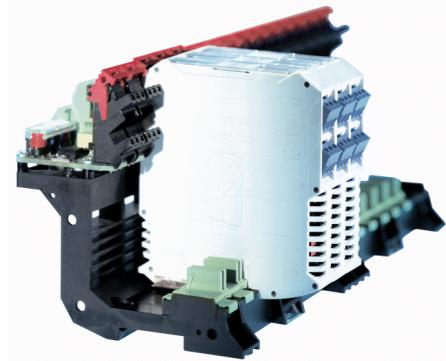

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**System overview**

**STAHL**

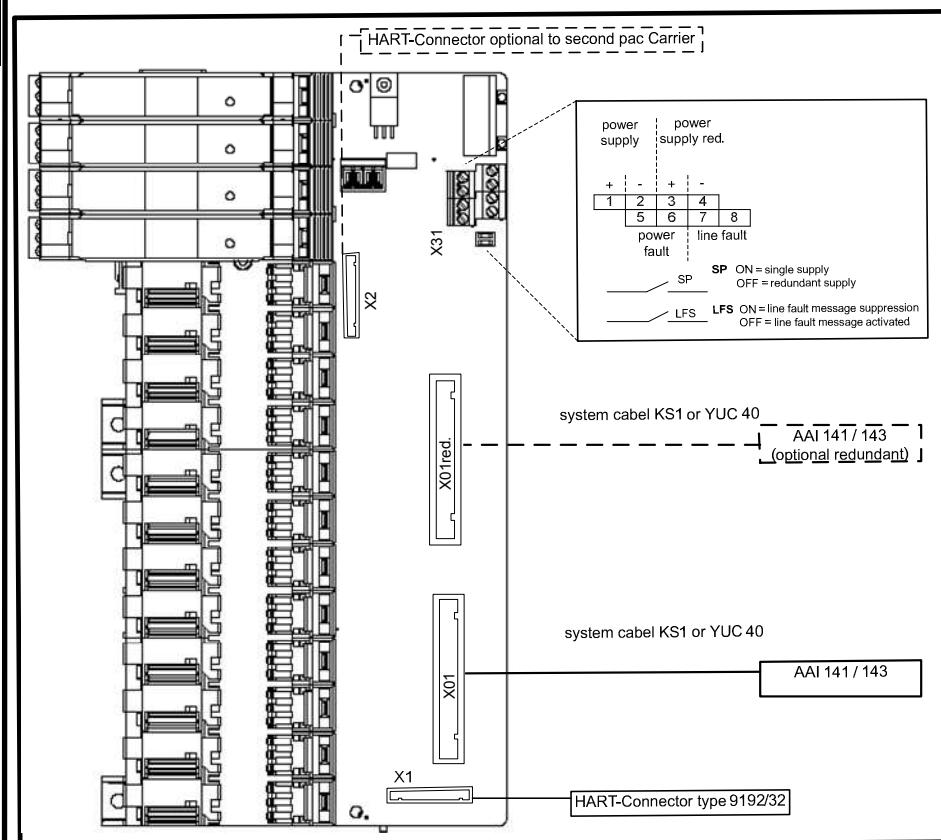

### Selection table

Control system							pac-Carrier		
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type	
Yokogawa	Centum VP	AAI 141 AAI 143	16 x AI	16	16	9192/32	AI 9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12	9195/16H-YO1-01V1	

### Technical data


<b>Certificates</b>	BVS 03 ATEX E213 X
<b>Explosion protection</b>	Ex II 3 G Ex nA nC II T4 Gc
<b>Installation</b>	In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area
<b>Power supply</b>	(X31) Nominal voltage $U_N$ Redundant supply Indication Fuse Polarity reversal protection
	24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes
<b>Connection field devices</b>	at the terminals of the I.S. isolators (specification see "signal loops") 16
<b>HART interface</b>	HART connector 14 pole (to HART Multiplexer type 9192/32 or to first pac- Carrier) HART connector optional to second pac- Carrier
<b>Connection automation system</b>	(X01, X01 red.) Connection Number of channels
	2 x plug 40 pole for KS1 or YUC 40 cable up to 16 (additional 16 redundant channels available)
<b>Error messaging</b>	(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“
	Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed
<b>Ambient conditions</b>	Ambient temperature Storage temperature Relative humidity (no condensation)
	max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤ 95 %
<b>Mechanical data</b>	Weight Mounting type Mounting position Casing / Terminal protection class Casing material Fire protecting class (UL-94)
	approx. 610 g on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 V0

STAHL


### Signal loops

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Transmitter supply unit (AI)**  
for 2-, 3-wire transmitter and  
mA-sources for 2-wire transmitter with  
HART

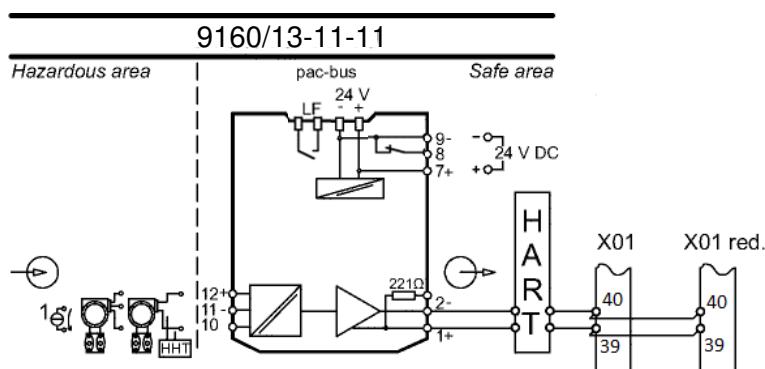

**Temperature transmitter (AI)**  
for resistance thermometer,  
thermocouple and RTD  
(Configuration by means of DIP  
switches or ISpac Wizard software)

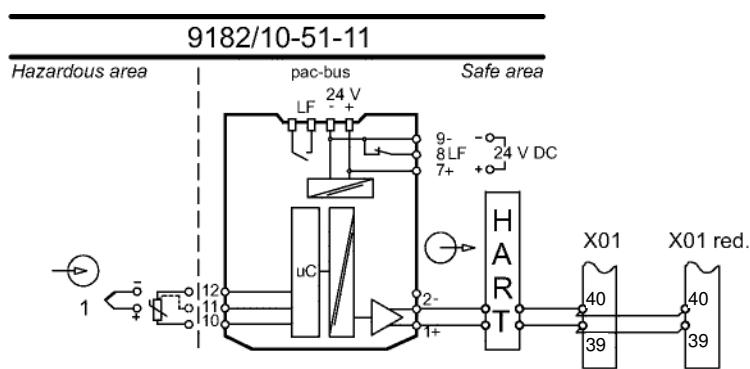


**Frequency transmitter (AI)**  
The frequency transmitter allows  
to monitor the speed of rotating  
devices in the hazardous area

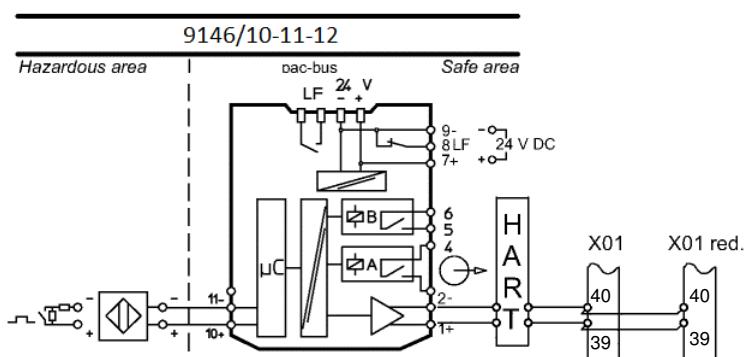

### Accessories and Spare Parts

Designation	Illustration	Description	Order number
Non-Ex i Termination Module	06314E00	The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
HART-Multiplexer	09731E00	<ul style="list-style-type: none"> <li>Used for digital connection of up to 32 HART-capable field devices to an HART management system</li> <li>Installation possible in Zone 2 and Div. 2</li> <li>Can be used up to SIL 3 (IEC 61508)</li> <li>The Device DTM is used to transmit HART information between HART compatible field devices and a FDT frame application such as Fieldmate</li> </ul>	9192/32-10-10
Fuse		Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

### Dimension drawings (all dimensions in mm) - subject to alterations

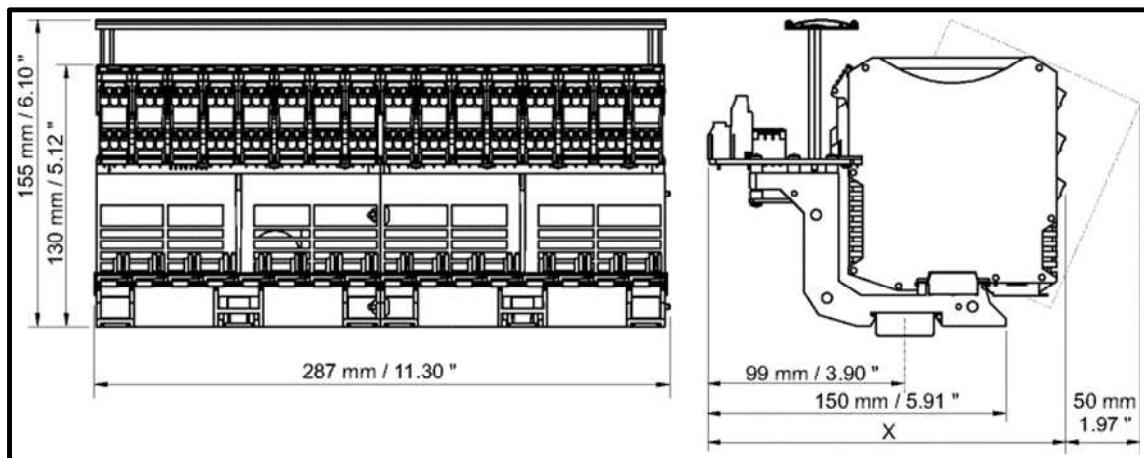

05178E00

STAHL

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
 Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list

terminal i.s.		channel	carrier slot	input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
1)	+	1	1	1	+	39	+	39
1)	-				-	40	-	40
1)	+	2	2	2	+	37	+	37
1)	-				-	38	-	38
1)	+	3	3	3	+	35	+	35
1)	-				-	36	-	36
1)	+	4	4	4	+	33	+	33
1)	-				-	34	-	34
1)	+	5	5	5	+	31	+	31
1)	-				-	32	-	32
1)	+	6	6	6	+	29	+	29
1)	-				-	30	-	30
1)	+	7	7	7	+	27	+	27
1)	-				-	28	-	28
1)	+	8	8	8	+	25	+	25
1)	-				-	26	-	26
1)	+	9	9	9	+	23	+	23
1)	-				-	24	-	24
1)	+	10	10	10	+	21	+	21
1)	-				-	22	-	22
1)	+	11	11	11	+	19	+	19
1)	-				-	20	-	20
1)	+	12	12	12	+	17	+	17
1)	-				-	18	-	18
1)	+	13	13	13	+	15	+	15
1)	-				-	16	-	16
1)	+	14	14	14	+	13	+	13
1)	-				-	14	-	14
1)	+	15	15	15	+	11	+	11
1)	-				-	12	-	12
1)	+	16	16	16	+	9	+	9
1)	-				-	10	-	10


- 1) Different possibilities of field device connections; for further information's see: manual of analog input: 9160/13-11-11 or 9182/10-51-11 and 9146/10-11-12.

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice.  
The illustration cannot be considered binding.

**pac-Carrier**  
**9195/08H-YO1-03V1**

**For Yokogawa / Centum VP / AAI543**


- Signal types: 16 x AO
- pac-Carrier for 8 modules, up to 16 signals
- ISpac isolator AO 9165/26-11-1\*, 9167/21-11-00 can be used
- Connection to HART-management systems
- Customized system cable type KS1 or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22  
(non conductible dust) and Div. 2

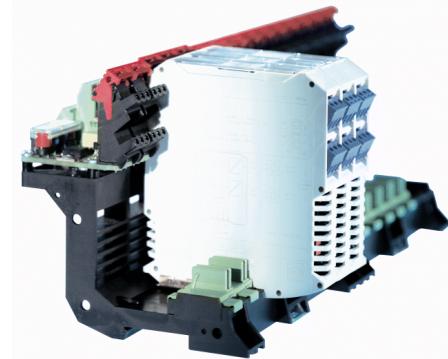

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**System overview**

STAHL

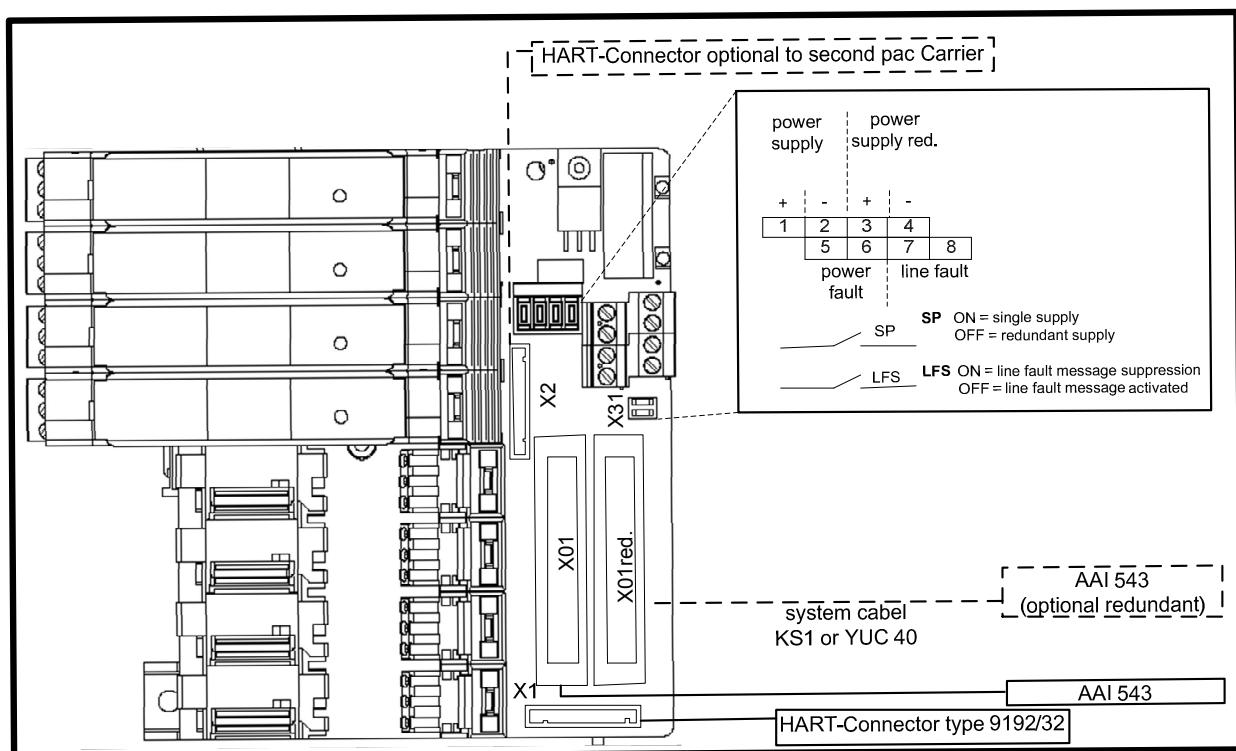

**Selection table**

Control system					pac-Carrier				
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type	
Yokogawa	Centum VP	AAI543	8 x AO	8	16	9192/32	AO 9165/26-11-1* 9167/21-11-00	9195/08H-YO1-03V1	

**Technical data**

<b>Certificates</b>	BVS 03 ATEX E213 X
<b>Explosion protection</b>	Ex II 3 G Ex nA nC II T4 Gc
<b>Installation</b>	In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area
<b>Power supply</b>	(X31) Nominal voltage U <sub>N</sub> Redundant supply Indication Fuse Polarity reversal protection
24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes	
<b>Connection field devices</b>	at the terminals of the I.S. isolators (specification see "signal loops") 16
<b>Connection automation system</b>	(X01, X01 red.) 2 x plug 40 pole for KS1 or YUC 40 cable up to 16 (additional 16 redundant channels available)
<b>HART interface</b>	HART connector 14 pole (to HART Multiplexer type 9192/32 or to first pac- Carrier) HART connector optional to second pac- Carrier
<b>Error messaging</b>	(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“
Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“	Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed
<b>Ambient conditions</b>	max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤ 95 %
<b>Mechanical data</b>	approx. 320 g on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 VO


## Signal loops

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISPAC isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).

### Isolating repeater (AO)


for control valves, i/p-convertisers or indicators  
bi-directional HART communication

Alternative: 9165/26-11-11

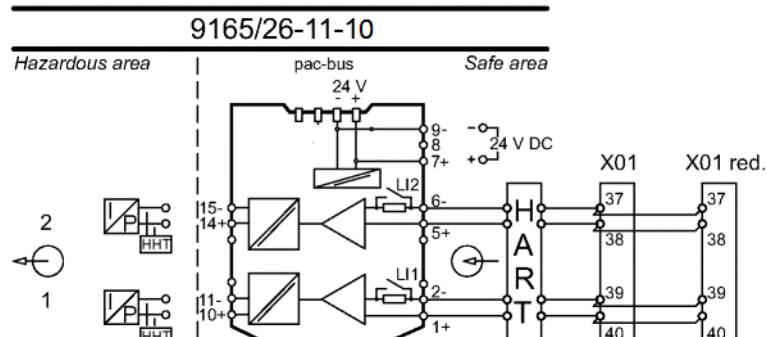

### Isolating repeater (AO)

Loop-powered, for control valves,  
i/p-convertisers or indicators  
bi-directional HART communication

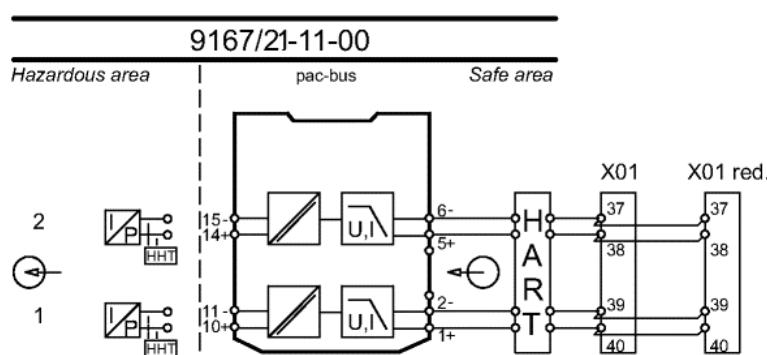


## Accessories and Spare Parts

Designation	Illustration	Description	Order number
Non-Ex i Termination Module	06314E00	The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
HART-Multiplexer	09731E00	<ul style="list-style-type: none"> <li>Used for digital connection of up to 32 HART-capable field devices to an HART management system</li> <li>Installation possible in Zone 2 and Div. 2</li> <li>Can be used up to SIL 3 (IEC 61508)</li> <li>The Device DTM is used to transmit HART information between HART compatible field devices and a FDT frame application such as Fieldmate</li> </ul>	9192/32-10-10
Fuse	T2,000A 250 V TR5	Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

STAHL

**Dimension drawings** (all dimensions in mm) - subject to alterations

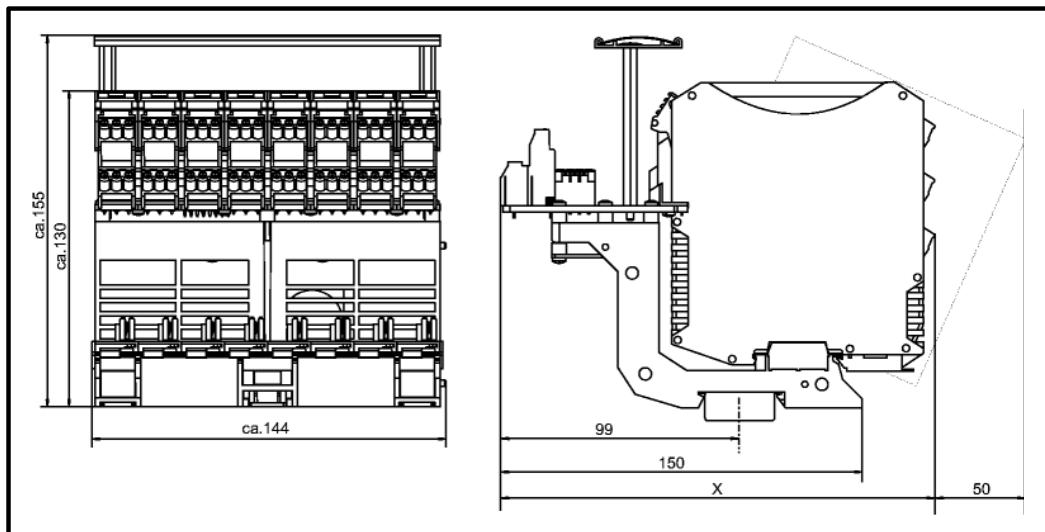

05177E00

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
 Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list

terminal i.s.		channel	carrier slot	input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
1)	+	1	1	1	+	40	+	40
1)	-				-	39	-	39
1)	+			2	+	38	+	38
1)	-				-	37	-	37
1)	+	3	2	3	+	36	+	36
1)	-				-	35	-	35
1)	+			4	+	34	+	34
1)	-				-	33	-	33
1)	+	5	3	5	+	32	+	32
1)	-				-	31	-	31
1)	+			6	+	30	+	30
1)	-				-	29	-	29
1)	+	7	4	7	+	28	+	28
1)	-				-	27	-	27
1)	+			8	+	26	+	26
1)	-				-	25	-	25
1)	+	9	5	9	+	24	+	24
1)	-				-	23	-	23
1)	+			10	+	22	+	22
1)	-				-	21	-	21
1)	+	11	6	11	+	20	+	20
1)	-				-	19	-	19
1)	+			12	+	18	+	18
1)	-				-	17	-	17
1)	+	13	7	13	+	16	+	16
1)	-				-	15	-	15
1)	+			14	+	14	+	14
1)	-				-	13	-	13
1)	+	15	8	15	+	12	+	12
1)	-				-	11	-	11
1)	+			16	+	10	+	10
1)	-				-	9	-	9

- 2) Different possibilities of field device connections; for further information's see: manual of analog output: 9165/26-11-1\* or and 9167/21-11-00.


STAHL

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice.  
The illustration cannot be considered binding.

**pac-Carrier**  
**9195/16H-YO1-04V1**

**For Yokogawa / Centum VP / AAI841**


- Signal types: 8 x AI + 8 x AO
- pac-Carrier for 16 modules, up to 16 signals
- ISpac isolator AI 9160/13-11-11, 9163/13-11-10, 9182/10-51-11, 9146/10-11-12, AO 9165/16-11-1\*, 9167/11-11-00 can be used
- Connection to HART-management systems
- Customized system cable type KS1 or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22  
(non conductible dust) and Div. 2

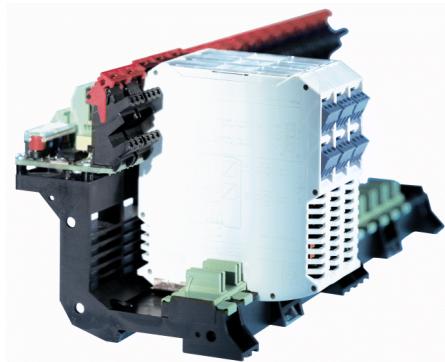

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**STAHL**

**System overview**

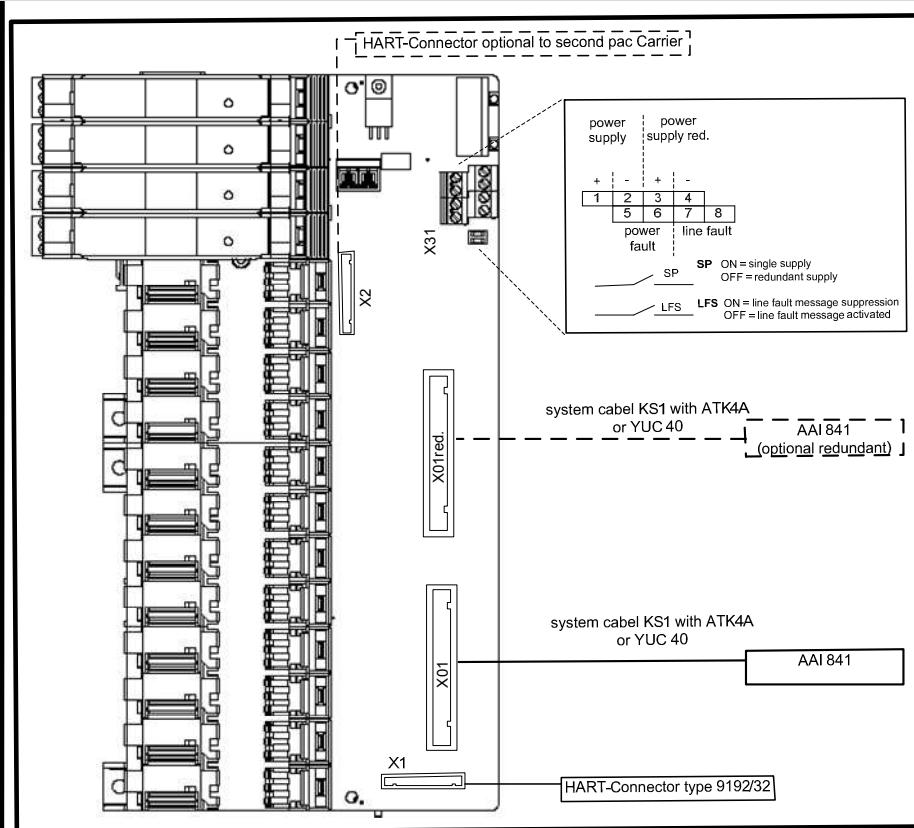

### Selection table

Control system									pac-Carrier			
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type				
Yokogawa	Centum VP	AAI 841	8 x AI 8 x AO	16	16	9192/32	AI 9160/13-11-11 9163/13-11-10 9182/10-51-11 9146/10-11-12  AO 9165/16-11-1* 9167/11-11-00	9195/16H-YO1-04V1				

### Technical data


<b>Certificates</b>	BVS 03 ATEX E213 X
<b>Explosion protection</b>	Ex II 3 G Ex nA nC II T4 Gc
<b>Installation</b>	In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area
<b>Power supply</b>	(X31) 24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“; „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes
<b>Connection field devices</b>	at the terminals of the I.S. isolators (specification see "signal loops") 16
<b>Connection automation system</b>	(X01, X01 red.) 1 x plug 40 pole for KS1 or YUC 40 cable up to 16 (additional 16 redundant channels available)
<b>HART interface</b>	HART connector 14 pole (to HART Multiplexer type 9192/32 or to first pac- Carrier) HART connector optional to second pac- Carrier
<b>Error messaging</b>	(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“ Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed
<b>Ambient conditions</b>	max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤ 95 %
<b>Mechanical data</b>	approx. 610 g on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 V0




### Signal loops (AI)

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Transmitter supply unit (AI)**  
for 2-, 3-wire transmitter and  
mA-sources for 2-wire transmitter with  
HART

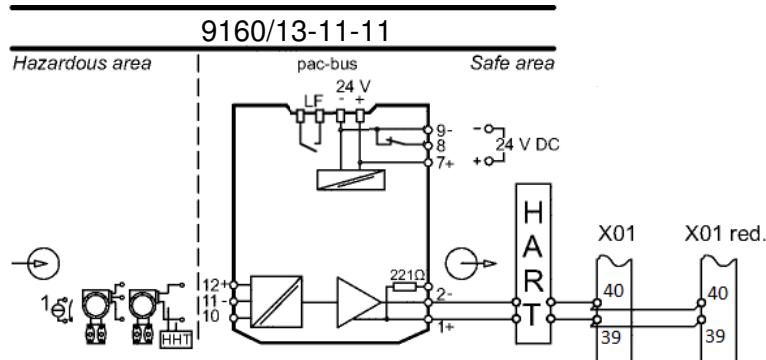


**Isolating repeater (AI)**  
for 4-wire transmitter and mA-sources  
bi-directional HART communication

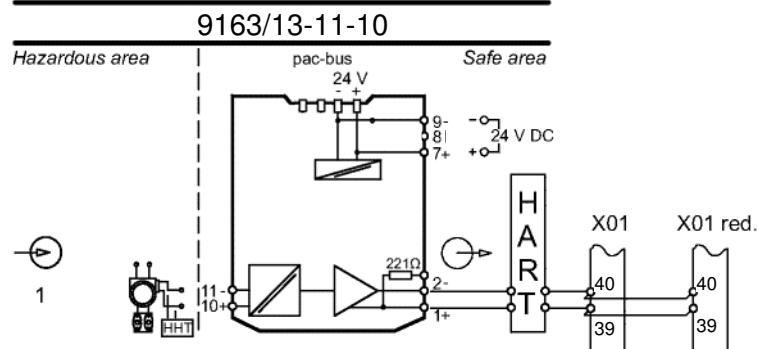

**Temperature transmitter (AI)**  
for resistance thermometer,  
thermocouple and RTD  
(Configuration by means of DIP  
switches or ISpac Wizard software)

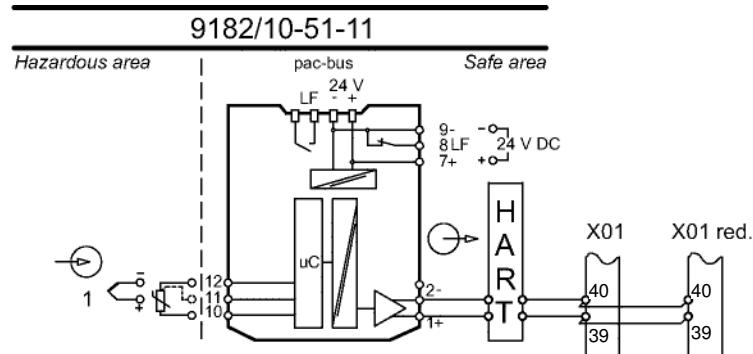

**Frequency transmitter (AI)**  
The frequency transmitter allows  
to monitor the speed of rotating  
devices in the hazardous area

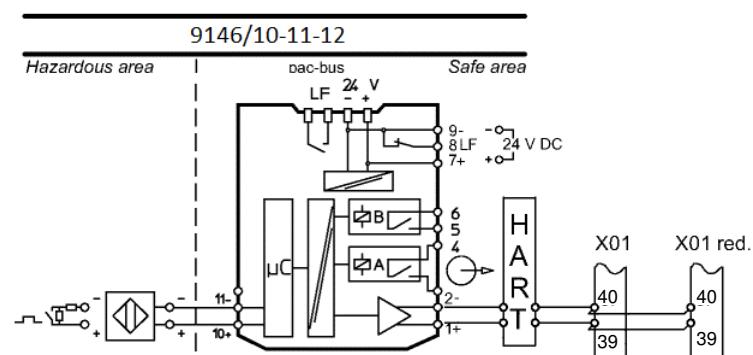


## Signal loops (AO)

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISPAC isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).

### Isolating repeater (AO)


for control valves, i/p-convertisers or indicators  
bi-directional HART communication  
slots 9 ... 16

Alternative: 9165/16-11-11 Rev. C

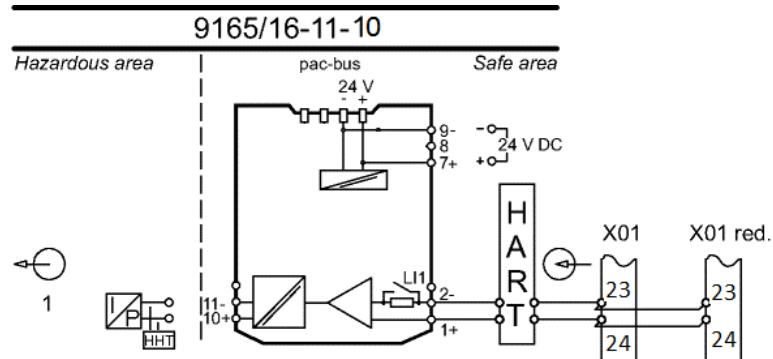

### Isolating repeater (AO)


Loop-powered, for control valves,  
i/p-convertisers or indicators  
bi-directional HART communication  
slots 9 ... 16

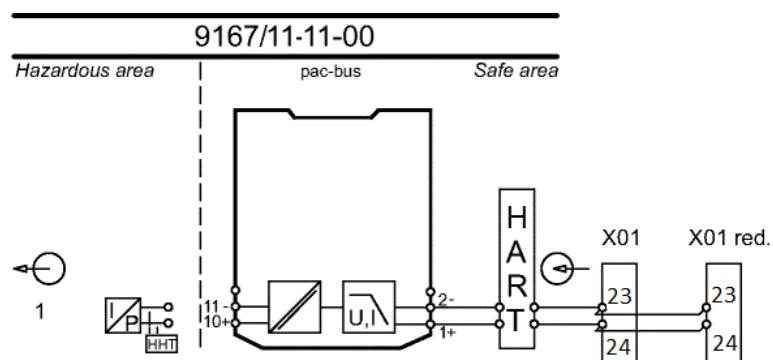

### Accessories and Spare Parts

Designation	Illustration	Description	Order number
Non-Ex i Termination Module		The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
Fuse		Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

### Dimension drawings (all dimensions in mm) - subject to alterations

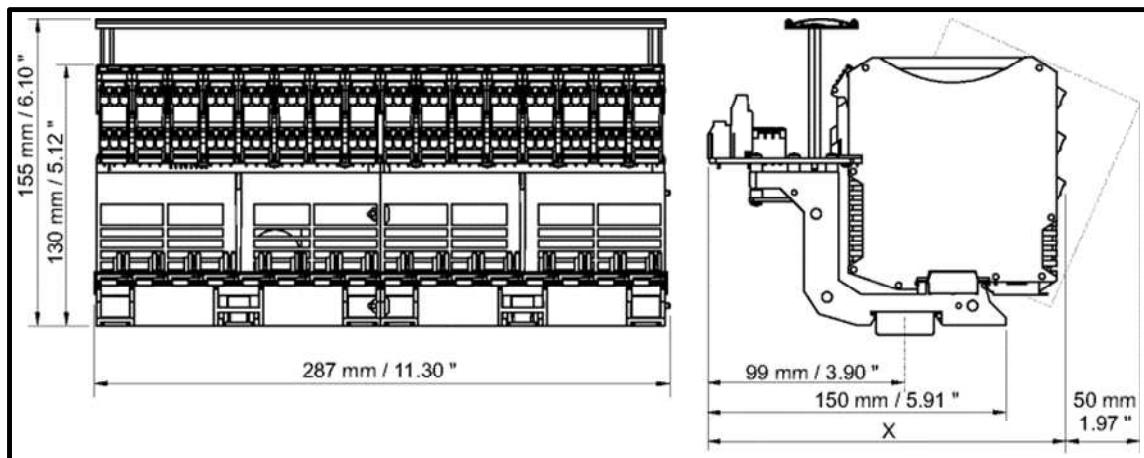

05178E00

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
 Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list

terminal i.s.		channel	carrier slot	output/ input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
10 1)	+	1	1	input 1	+	39	+	39
11 1)	-				-	40	-	40
10 1)	+	2	2	input 2	+	37	+	37
11 1)	-				-	38	-	38
10 1)	+	3	3	input 3	+	35	+	35
11 1)	-				-	36	-	36
10 1)	+	4	4	input 4	+	33	+	33
11 1)	-				-	34	-	34
10 1)	+	5	5	input 5	+	31	+	31
11 1)	-				-	32	-	32
10 1)	+	6	6	input 6	+	29	+	29
11 1)	-				-	30	-	30
10 1)	+	7	7	input 7	+	27	+	27
11 1)	-				-	28	-	28
10 1)	+	8	8	input 8	+	25	+	25
11 1)	-				-	26	-	26
10	+	9	9	output 1	+	24	+	24
11	-				-	23	-	23
10	+	10	10	output 2	+	22	+	22
11	-				-	21	-	21
10	+	11	11	output 3	+	20	+	20
11	-				-	19	-	19
10	+	12	12	output 4	+	18	+	18
11	-				-	17	-	17
10	+	13	13	output 5	+	16	+	16
11	-				-	15	-	15
10	+	14	14	output 6	+	14	+	14
11	-				-	13	-	13
10	+	15	15	output 7	+	12	+	12
11	-				-	11	-	11
10	+	16	16	output 8	+	10	+	10
11	-				-	9	-	9

- 1) Different possibilities of field device connections; for further information's see: manual of analog input: 9160/13-11-11 or 9163/13-11-10 or 9182/10-51-11 and 9146/10-11-12 und analog output 9165/16-11-1\* and 9167/11-11-00.


STAHL

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice.  
The illustration cannot be considered binding.

**pac-Carrier**  
**9195/08H-YO1-04V1**

**For Yokogawa / Centum VP / AAI 841**


- Signal types: 8 x AI + 8 x AO
- pac-Carrier for 8 modules, up to 16 signals
- ISpac isolator AI 9160/23-11-11, 9163/23-11-10, 9182/20-51-11, 9146/20-11-11, AO 9165/26-11-1\*, 9167/21-11-00 can be used
- Connection to HART-management systems
- Customized system cable type KS1 or YUC 40 to automation systems
- Redundant power supply with message contact and exchangeable fuses
- Horizontal or vertical installation
- Simple installation on DIN rail or mounting plate
- Many labeling possibilities
- Fast and secure installation of the isolators without tools
- Comfortable exchange of the isolators with secured ejector mechanism
- Installation possible in Zone 2, Zone 22 (non conductible dust) and Div. 2

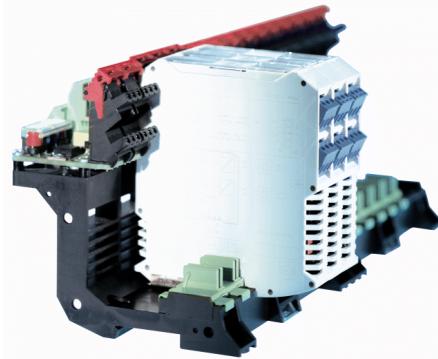

Comfortable and simple integration of the I.S. isolators ISpac into Yokogawa / Centum VP automation systems via system specific connection boards and system cables.

**STAHL**

**System overview**

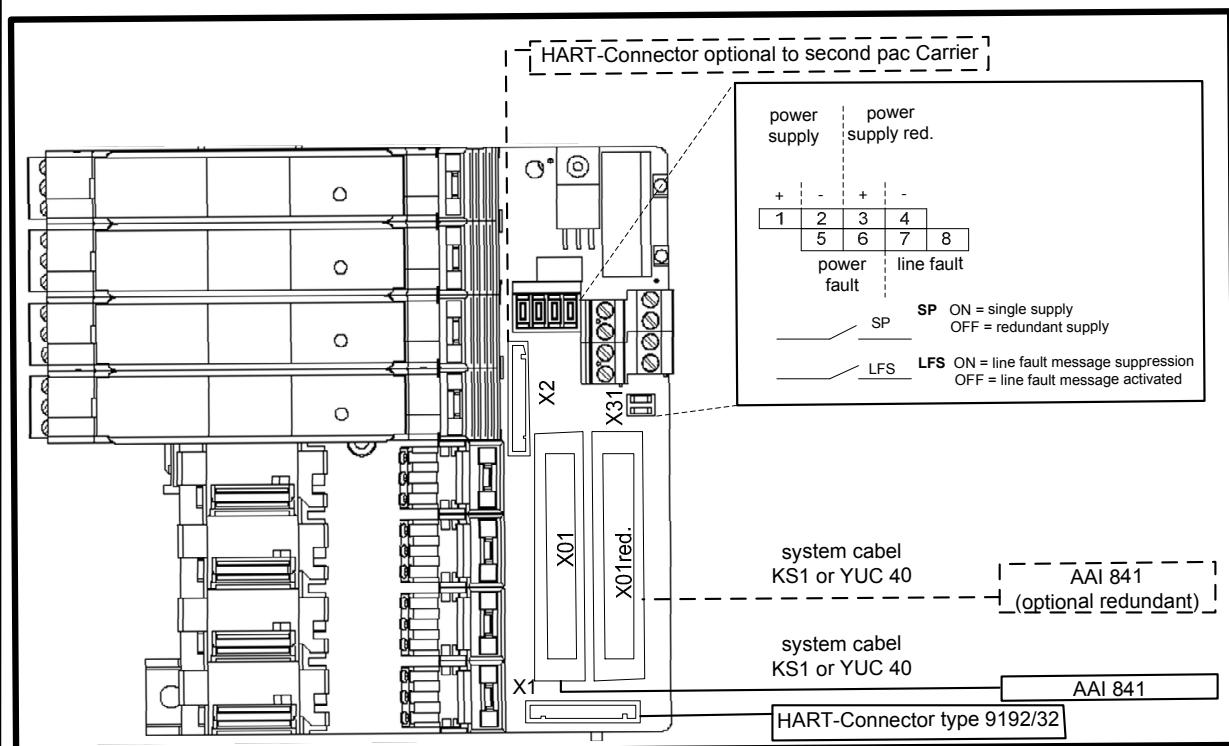

### Selection table


Control system									pac-Carrier			
DCS manufacturer	DCS type	I/O cards type	Signal type	Slots	Channels	HART-Mux	ISpac type	Type				
Yokogawa	Centum VP	AAI 841	8 x AI 8 x AO	8	16	9192/32	AI 9160/23-11-11 9163/23-11-10 9182/20-51-11 9146/20-11-11 AO 9165/26-11-1* 9167/21-11-00			9195/08H-YO1-04V1		
<b>Technical data</b>												
<b>Certificates</b>			BVS 03 ATEX E213 X Ex II 3 G Ex nA nC II T4 Gc									
<b>Explosion protection</b>			In Zone 2, Zone 22 (non conductible dust), Div. 2 and in the safe area									
<b>Installation</b>												
<b>Power supply</b>			(X31) 24 V DC (19 V ... 31,2 V) yes, decoupled with diodes 2 LED green „PWR1“, „PWR2“ 2 x TR5; T 2,0 A; exchangeable, for primary and redundant supply yes									
<b>Connection field devices</b>			at the terminals of the I.S. isolators (specification see "signal loops") 16									
<b>Connection automation system</b>			(X01, X01 red.) 2 x plug 40 pole for KS1 or YUC 40 cable up to 16 (additional 16 redundant channels available)									
<b>HART interface</b>			HART connector 14 pole (to HART Multiplexer type 9192/32 or to first pac- Carrier) HART connector optional to second pac- Carrier									
<b>Error messaging</b>			(X31) Power supply failure PF Line fault LF (of ISpac modules) Setting switch „SP“ Setting switch „LFS“ Contact (35 V / 100 mA), closed in good conditions Contact (35 V / 100 mA), closed in good conditions Power failure message suppressed for redundant supply (single supply) Line fault message suppressed									
<b>Ambient conditions</b>			max. - 20 °C ... + 70 °C (see specification of the I.S. isolators) - 40 °C ... + 80 °C ≤ 95 %									
<b>Mechanical data</b>			approx. 320 g on DIN rail (NS35 / 15, NS35 / 7.5) or mounting plate (4 x screw M6) horizontal or vertical IP 00 / IP 20 PA 6.6 V0									

**STAHL**


### Signal loops (AI)

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISpac isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).


**Transmitter supply unit (AI)**  
for 2-, 3-wire transmitter and  
mA-sources for 2-wire transmitter with  
HART  
slots 1 ... 4

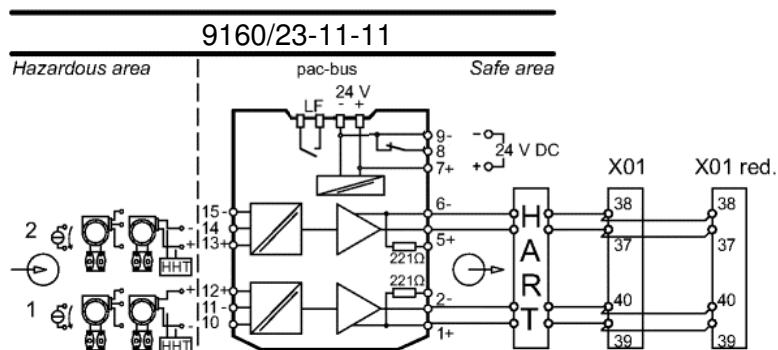


**Isolating repeater (AI)**  
for 4-wire transmitter and mA-sources  
bi-directional HART communication  
slots 1 ... 4

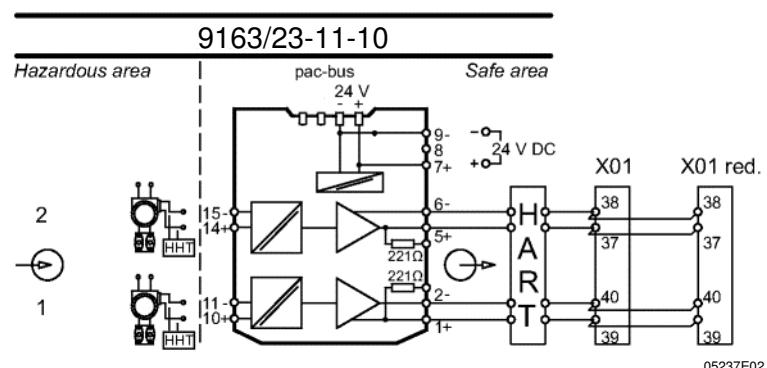

**Temperature transmitter (AI)**  
for resistance thermometer,  
thermocouple and RTD  
(Configuration by means of DIP  
switches or ISpac Wizard software)  
slots 1 ... 4

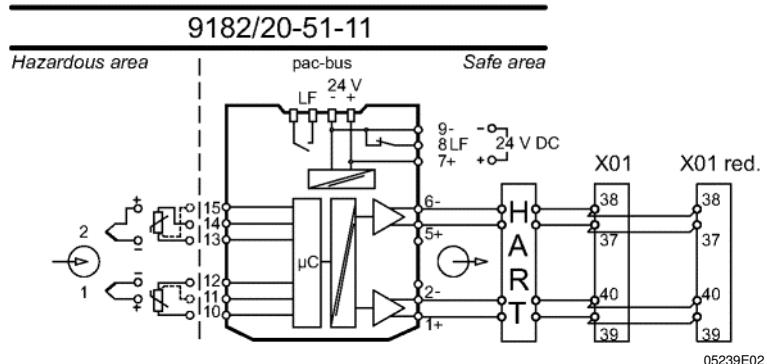

**Frequency transmitter (AI)**  
The frequency transmitter allows  
to monitor the speed of rotating  
devices in the hazardous area  
slots 1 ... 4

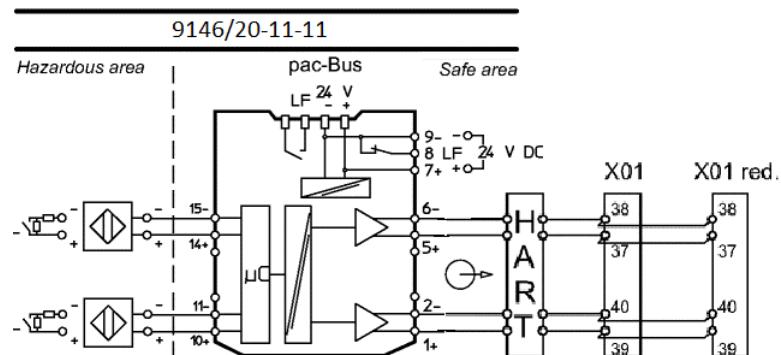


### Signal loops (AI)

The diagrams below show typical applications. Please refer to the connection list to get the entire connection scheme. Basic technical parameters of the ISPAC isolating repeaters can be found at the end of this document. The detailed specifications can be downloaded at: [www.ispac.info](http://www.ispac.info).

#### Isolating repeater (AO)


for control valves, i/p-convertisers or indicators  
bi-directional HART communication  
slot 5 ... 8

Alternatvie: 9165/26-11-11 Rev. C

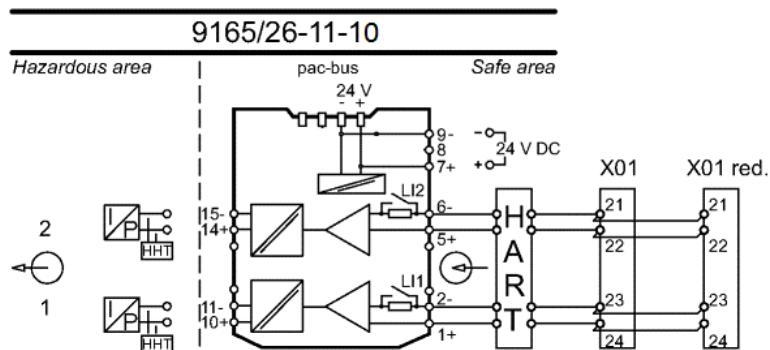

#### Isolating repeater (AO)

Loop-powered, for control valves,  
i/p-convertisers or indicators  
bi-directional HART communication  
slot 5 ... 8

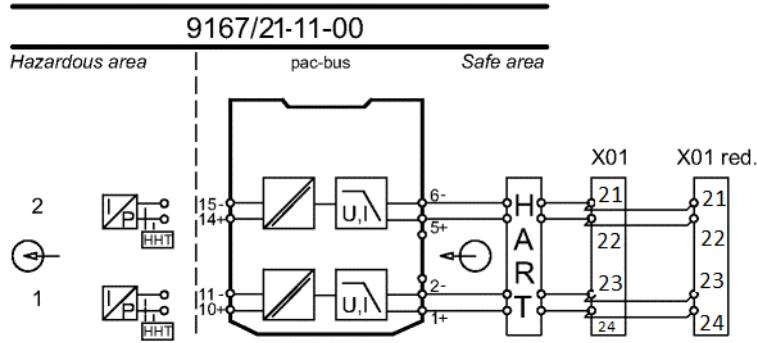


STAHL

#### Accessories and Spare Parts

Designation	Illustration	Description	Order number
Non-Ex i Termination Module	06314E00	The termination module is used to integrate non-Ex i field circuit into the system integration solution pac-Carrier type 9195. In such a way it enables a flexible mixture of Ex i and non-Ex i field circuits.	9191/20-00-50s
HART-Multiplexer	09731E00	<ul style="list-style-type: none"> <li>Used for digital connection of up to 32 HART-capable field devices to an HART management system</li> <li>Installation possible in Zone 2 and Div. 2</li> <li>Can be used up to SIL 3 (IEC 61508)</li> <li>The Device DTM is used to transmit HART information between HART compatible field devices and a FDT frame application such as Fieldmate</li> </ul>	9192/32-10-10
Fuse		Fuse T2,000A 250 V TR5. Minimum order is 10 pieces	111336

#### Dimension drawings (all dimensions in mm) - subject to alterations

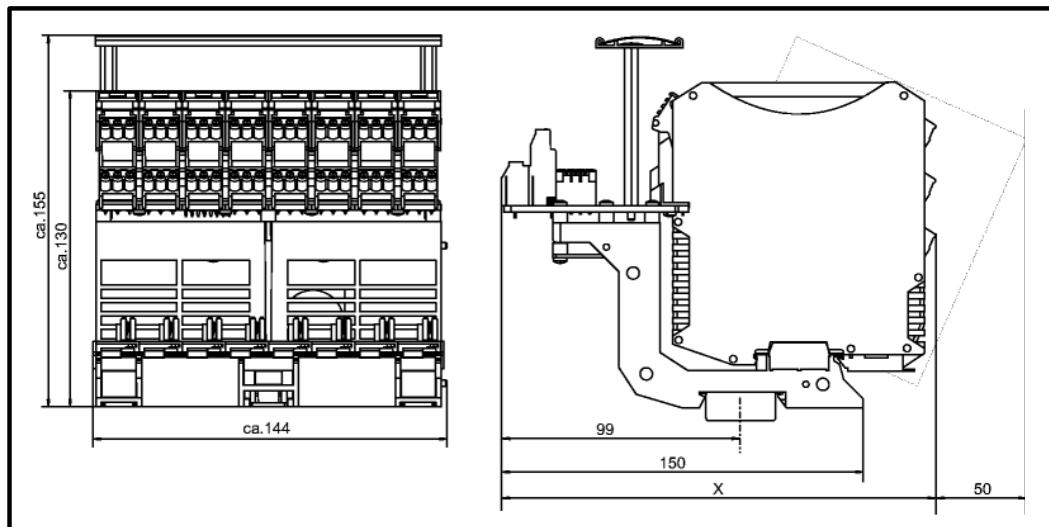

	Dimension x
Screw terminals	176 mm
Cage clamp terminals	186 mm

Please note: In order to snap in the ISpac modules an extra space of approx. 50 mm is required.  
Please read the "ISpac engineering guideline" carefully before you start to engineer the enclosures with incorporated ISpac modules with or without pac-Carriers. The "ISpac engineering guideline" can be downloaded from: [www.ispac.info](http://www.ispac.info).

### Connection list

terminal i.s.		channel	carrier slot	output / input no.	pin X01 (ATK4A + KS1)		pin X01 red. (ATK4A + KS1)	
10 1)	+				+	39	+	39
11 1)	-	1	1	input 1	-	40	-	40
14 1)	+			input 2	+	37	+	37
15 1)	-	2	2	input 2	-	38	-	38
10 1)	+			input 3	+	35	+	35
11 1)	-	3	2	input 3	-	36	-	36
14 1)	+			input 4	+	33	+	33
15 1)	-	4	2	input 4	-	34	-	34
10 1)	+			input 5	+	31	+	31
11 1)	-	5	3	input 5	-	32	-	32
14 1)	+			input 6	+	29	+	29
15 1)	-	6	3	input 6	-	30	-	30
10 1)	+			input 7	+	27	+	27
11 1)	-	7	4	input 7	-	28	-	28
14 1)	+			input 8	+	25	+	25
15 1)	-			input 8	-	26	-	26
10	+	9	5	output 1	+	24	+	24
11	-			output 1	-	23	-	23
14	+	10	5	output 2	+	22	+	22
15	-			output 2	-	21	-	21
10	+	11	6	output 3	+	20	+	20
11	-			output 3	-	19	-	19
14	+	12	6	output 4	+	18	+	18
15	-			output 4	-	17	-	17
10	+	13	7	output 5	+	16	+	16
11	-			output 5	-	15	-	15
14	+	14	7	output 6	+	14	+	14
15	-			output 6	-	13	-	13
10	+	15	8	output 7	+	12	+	12
11	-			output 7	-	11	-	11
14	+	16	8	output 8	+	10	+	10
15	-			output 8	-	9	-	9

Different possibilities of field device connections; for further information's see: manual of analog input: 9160/23-11-11 or 9163/23-11-10 or 9182/20-51-11 and 9146/20-11-11 and analog output: 9165/26-11-1\* and 9167/21-11-00.

STAHL

We reserve the right to make alterations to the technical data, weights, dimensions, designs and products available without notice.  
The illustration cannot be considered binding.





**R. STAHL Schaltgeräte GmbH**  
Am Bahnhof 30, D-74638 Waldenburg, Germany  
Telephone +49 7942 943-0  
+49 7942 943-4123 (Technical support)  
Telefax +49 7942 943-4333  
E-Mail: [info@stahl.de](mailto:info@stahl.de)  
Internet: <http://www.r-stahl.com>